

04/2014

digiCOVER



DIGITAL+PHOTO+MORE

Artikelnr.	Name/Deutsch	EAN Nummer		UVP
N3602	digiCOVER - LYTRO Lichtfeldkamera	4260342398883		16,99
B3602	digiCOVER basic - LYTRO Lichtfeldkamera	4260342398876		13,99
BA404	digiCOVER basic 2 Stück Apple i do it my self	4260125968814		13,99
B1864	digiCOVER basic 2 Stück Apple iPhone 3 G3S	4260125967701	1244789	13,99
B2525	digiCOVER basic 2 Stück Apple iPhone 4/4s	4260220752035	1315659	13,99
B3290H	digiCOVER basic 2 Stück Apple iPhone 5	4260266959023	1632522	13,99
B3615H	digiCOVER basic 2 Stück Apple iPhone 5c	4260342398593	1773046	13,99
B1654	digiCOVER basic 2 Stück Apple iPod Classic	4260125968869		13,99
B952	digiCOVER basic 2 Stück Apple iPod Nano 4G	4260041671713		13,99
B2361	digiCOVER basic 2 Stück Apple iPod nano 5G 8/16GB	4260047004140	1337619	13,99
B2691	digiCOVER basic 2 Stück Apple iPod nano 6G	4260041678309		13,99
B3388	digiCOVER basic 2 Stück Apple iPod nano 7G	4260266958378	1665187	13,99
B1674	digiCOVER basic 2 Stück Apple iPod Touch 1. Generation	4260125968876	1283643	13,99
B2692	digiCOVER basic 2 Stück Apple iPod Touch 4. Generation	4260041676831	1346397	13,99
B3387	digiCOVER basic 2 Stück Apple iPod Touch 5. Generation	4260266958392	1665185	13,99
410	digiCOVER basic 2,0 Zoll 3er 4:3	4260047004102	1048286	8,99
411	digiCOVER basic 2,2 Zoll 3er 4:3	4260047004119	1048287	8,99
412	digiCOVER basic 2,5 Zoll 3er 4:3	4260041670358	1048288	8,99
B412	digiCOVER basic 2,5 Zoll Single 4:3	4260125968302	1238423	5,99
403-169	digiCOVER basic 2,7 Zoll 3er 16 : 9	4260220752493	1330740	9,99
403	digiCOVER basic 2,7 Zoll 3er 4:3	4260125965165	1169542	8,99
B403-169	digiCOVER basic 2,7 Zoll Single 16 : 9	4260220752462	1330743	6,49
B403	digiCOVER basic 2,7 Zoll Single 4:3	4260125968838	1241999	5,99
B413-169	digiCOVER basic 2,8 Zoll Single 16 : 9	4260220752424	1330747	6,49
B413	digiCOVER basic 2,8 Zoll Single 4:3	4260220752431	1330746	6,49
413-169	digiCOVER basic 2,8 Zoll 3er 16 : 9	4260220752486	1330741	9,99
413	digiCOVER basic 2,8 Zoll 3er 4:3	4260047004133	1048289	8,99
414-169	digiCOVER basic 3,0 Zoll 3er 16 : 9	4260220752509	1330739	9,99
414	digiCOVER basic 3,0 Zoll 3er 4:3	4260041670372	1048290	8,99
B414-169	digiCOVER basic 3,0 Zoll Single 16 : 9	4260220752448	1330745	6,49
B414	digiCOVER basic 3,0 Zoll Single 4:3	4260125968296	1238426	5,99
320-169	digiCOVER basic 3,2 Zoll 3er 16 : 9	4260342391297	1812979	9,99
320	digiCOVER basic 3,2 Zoll 3er 4:3	4260342391280	1812977	8,99
B320-169	digiCOVER basic 3,2 Zoll Single 16 : 9	4260342391310	1812980	6,49
B320	digiCOVER basic 3,2 Zoll Single 4:3	4260342391273	1812978	5,99
405-169	digiCOVER basic 3,5 Zoll 3er 16 : 9	4260220752479	1330742	9,99
405	digiCOVER basic 3,5 Zoll 3er 4:3	4260047004058	1048291	8,99
B405H	digiCOVER basic 3,5 Zoll Handy 2er	4260041672000	1261994	13,99
B405-169	digiCOVER basic 3,5 Zoll Single 16 : 9	4260220752455	1330744	6,49
B405	digiCOVER basic 3,5 Zoll Single 4:3	4260125968319	1238427	5,99
B2067	digiCOVER basic Canon A1100 is	4260125969170	1242061	13,99
B2070	digiCOVER basic Canon A2100 is	4260125969200	1242064	13,99
B2615	digiCOVER basic Canon Digital IXUS 1000HS	4260041675568	1333646	13,99
B2402	digiCOVER basic Canon Digital IXUS 105 IS	4260041674899	1299618	13,99
B2991	digiCOVER basic Canon Digital IXUS 1100 HS	4260266951485	1467613	13,99
B2824	digiCOVER basic Canon Digital IXUS 115 / 117 HS	4260041678576	1395858	13,99
B2277	digiCOVER basic Canon Digital IXUS 120 IS	4260041673342	1271089	13,99
B3135	digiCOVER basic Canon Digital IXUS 125 HS	4260266953557	1518293	13,99
B2403	digiCOVER basic Canon Digital IXUS 130 IS	4260041674905	1299619	13,99
B2278	digiCOVER basic Canon Digital IXUS 200 IS	4260041673359	1271090	13,99
B2409	digiCOVER basic Canon Digital IXUS 210 IS	4260041674967	1299625	13,99
B2823	digiCOVER basic Canon Digital IXUS 220 HS	4260041678569	1395857	13,99
B2992	digiCOVER basic Canon Digital IXUS 230 HS	4260266951492	1467614	13,99
B3136	digiCOVER basic Canon Digital IXUS 500 HS	4260266953564	1518294	13,99
B3171	digiCOVER basic Canon Digital IXUS 510 HS	4260266954011	1537384	13,99
B2616	digiCOVER basic Canon EOS 60D / 600D	4260041675575	1333648	13,99
B1865	digiCOVER basic Canon EOS 1000 D	4260125969743	1244040	13,99
B3502	digiCOVER basic Canon EOS 100D	4260342399255	1717973	13,99
B2830	digiCOVER basic Canon EOS 1100 D	4260041678590	1395860	13,99
B3784	digiCOVER basic Canon EOS 1200D	4260342397848	1836482	13,99
B2379	digiCOVER basic Canon EOS 1D Mark IV	4260041674813	1291702	13,99
B3168	digiCOVER basic Canon EOS 1D X	4260266953991	1537382	13,99
B1515	digiCOVER basic Canon EOS 40D	4260125969781	1244043	13,99
B1728	digiCOVER basic Canon EOS 450D / 500 D	4260125969750	1244041	13,99
B1889	digiCOVER basic Canon EOS 50 D	4260125969767		13,99
B2401	digiCOVER basic Canon EOS 550D	4260041674882	1299586	13,99
B1961	digiCOVER basic Canon EOS 5D Mark II	4260041674769	1291688	13,99
B3169	digiCOVER basic Canon EOS 5D Mark III	4260266954004	1537383	13,99
B3268	digiCOVER basic Canon EOS 650D / 700D	4260266959276	1593293	13,99
B3315	digiCOVER basic Canon EOS 6D	4260266957234	1634346	13,99
B3622	digiCOVER basic Canon EOS 70D	4260342398777	1773052	13,99
B2283	digiCOVER basic Canon EOS 7D	4260041673403	1271098	13,99
B3314	digiCOVER basic Canon EOS M	4260266957227	1634344	13,99
B2064	digiCOVER basic Canon IXUS 100 is	4260125969149	1242058	13,99

B2063	digiCOVER basic Canon IXUS 110 is	4260125969132	1242057	13,99
B3522	digiCOVER basic Canon IXUS 135 / Ixus 132	4260342399149	1724338	13,99
B3442	digiCOVER basic Canon IXUS 140	4260342399835	1694252	13,99
B3806	digiCOVER basic Canon IXUS 145/150	4260342397701	1837998	13,99
B3805	digiCOVER basic Canon IXUS 155	4260342397725	1837996	13,99
B3295	digiCOVER basic Canon IXUS 240HS	4260266958965	1634425	13,99
B3415	digiCOVER basic Canon IXUS 255 HS	4260266958262	1694180	13,99
B3798	digiCOVER basic Canon IXUS 265 HS	4260342397824	1836487	13,99
B2511	digiCOVER basic Canon IXUS 300 HS	4260220751946	1314517	13,99
B2868	digiCOVER basic Canon IXUS 310 HS	4260041679313	1417289	13,99
B1611	digiCOVER basic Canon Ixus 85	4260041670013	1246328	13,99
B2071	digiCOVER basic Canon IXUS 990 IS	4260125969217	1242065	13,99
B2612	digiCOVER basic Canon Power Shot G12	4260041675537	1333633	13,99
B2614	digiCOVER basic Canon Power Shot S95	4260041675551	1333643	13,99
B2613	digiCOVER basic Canon Power Shot SX130 IS	4260041675544	1333640	13,99
B2611	digiCOVER basic Canon Power Shot SX30 IS	4260041675520	1333628	13,99
B2993	digiCOVER basic Canon PowerShot SX150 IS	4260266951508	1467617	13,99
B2279	digiCOVER basic Canon PowerShot 120 IS	4260041673366	1271091	13,99
B2743	digiCOVER basic Canon PowerShot 3300	4260041676954	1370076	13,99
B2741	digiCOVER basic Canon PowerShot A1200	4260041676930	1370072	13,99
B2742	digiCOVER basic Canon PowerShot A2200	4260041676947	1370073	13,99
B3165	digiCOVER basic Canon PowerShot A2300 / A2400 IS	4260266953953	1537377	13,99
B2404	digiCOVER basic Canon PowerShot A3000 IS	4260041674912	1299620	13,99
B2405	digiCOVER basic Canon PowerShot A3100 IS	4260041674929	1299621	13,99
B3166	digiCOVER basic Canon PowerShot A3400 IS / A4000 IS	4260266953960	1537378	13,99
B2406	digiCOVER basic Canon PowerShot A490	4260041674936	1299622	13,99
B2407	digiCOVER basic Canon PowerShot A495	4260041674943	1299623	13,99
B2740	digiCOVER basic Canon PowerShot A800	4260041676923	1370070	13,99
B3167	digiCOVER basic Canon PowerShot D20	4260266953984	1537381	13,99
B3802	digiCOVER basic Canon PowerShot D30	4260342397787	1837989	13,99
B3212	digiCOVER basic Canon PowerShot ELPH 110 HS	4260266953977	1537379	13,99
B1999	digiCOVER basic Canon PowerShot G10	4260125969811	1244047	13,99
B2282	digiCOVER basic Canon PowerShot G11	4260041673397	1271094	13,99
B3344	digiCOVER basic Canon PowerShot G15	4260266958903	1665192	13,99
B3634	digiCOVER basic Canon PowerShot G16	4260342398678	1773056	13,99
B3134	digiCOVER basic Canon PowerShot G1X	4260266953540	1518292	13,99
B3804	digiCOVER basic Canon PowerShot G1X	4260342397749	1837994	13,99
B3438	digiCOVER basic Canon PowerShot N	4260342399811	1694254	13,99
B3803	digiCOVER basic Canon PowerShot N100	4260342397763	1837992	13,99
B3095	digiCOVER basic Canon PowerShot S100	4260266954998		13,99
B3313	digiCOVER basic Canon PowerShot S110	4260266957197	1634342	13,99
B3677	digiCOVER basic Canon PowerShot S120	4260342391037	1783061	13,99
B2281	digiCOVER basic Canon PowerShot S90	4260041673380	1271093	13,99
B3636	digiCOVER basic Canon PowerShot SX 170IS	4260342398630	1773058	13,99
B3508	digiCOVER basic Canon PowerShot SX 270/280HS	4260342399231	1717976	13,99
B3514	digiCOVER basic Canon PowerShot SX 500 IS	4260342399194	1717986	13,99
B3635	digiCOVER basic Canon PowerShot SX 510HS	4260342398654	1773057	13,99
B3796	digiCOVER basic Canon PowerShot SX 600 / 700 HS	4260342391501	1836485	13,99
B2280	digiCOVER basic Canon PowerShot SX20 IS	4260041673373	1271092	13,99
B2408	digiCOVER basic Canon PowerShot SX210 IS	4260041674950	1299624	13,99
B2829	digiCOVER basic Canon PowerShot SX220 / SX230 HS	4260041678583	1395859	13,99
B3172	digiCOVER basic Canon PowerShot SX240 HS / SX260 HS	4260266954028	1537386	13,99
B2068	digiCOVER basic Canon SX10 is	4260125969187	1242062	13,99
B2066	digiCOVER basic Canon Sx200is	4260125969163	1242060	13,99
B3228	digiCOVER basic Canon SX40	4260266955209	1558773	13,99
B3312	digiCOVER basic Canon SX50 HS	4260266957180	1634339	13,99
B2065	digiCOVER basic Canon I XUS 95 is	4260125969156	1242059	13,99
B2400	digiCOVER basic Casio EX-FH100	4260041674875	1299585	13,99
B2643	digiCOVER basic Casio EX-FH20	4260041675841	1333708	13,99
B2621	digiCOVER basic Casio EX-FH25	4260041675629	1333659	13,99
B2119	digiCOVER basic Casio EX-FS10	4260041671584	1252210	13,99
B2210	digiCOVER basic Casio EX-H10 / H15	4260041672239	1267289	13,99
B2831	digiCOVER basic Casio EX-H30	4260041678606	1395861	13,99
B2619	digiCOVER basic Casio EX-S200	4260041675605	1333655	13,99
B2745	digiCOVER basic Casio EX-TR100 TRYX	4260041676978	1370079	13,99
B2399	digiCOVER basic Casio EX-Z 2000	4260041674868	1299584	13,99
B2617	digiCOVER basic Casio EX-Z 230	4260041675582	1333651	13,99
B2509	digiCOVER basic Casio EX-Z 330	4260220751632		13,99
B2121	digiCOVER basic Casio EX-Z1	4260041671607	1252212	13,99
B2178	digiCOVER basic Casio EX-Z22	4260041672291	1267291	13,99
B2120	digiCOVER basic Casio EX-Z270	4260041671591	1252211	13,99
B3173	digiCOVER basic Casio EX-Z28	4260266954035	1537387	13,99
B2644	digiCOVER basic Casio EX-Z350	4260041675858	1333709	13,99
B2088	digiCOVER basic Casio EX-Z400	4260041671690	1252221	13,99
B2264	digiCOVER basic Casio EX-Z450	4260041673212	1271076	13,99
B3174	digiCOVER basic Casio EX-Z690	4260266954042	1537388	13,99
B2620	digiCOVER basic Casio EX-Z800	4260041675612	1333657	13,99
B2265	digiCOVER basic Casio EX-Z90	4260041673229	1271077	13,99
B2618	digiCOVER basic Casio EX-ZR10	4260041675599	1333654	13,99
B2744	digiCOVER basic Casio EX-ZR100	4260041676961	1370078	13,99
B3117	digiCOVER basic Casio EX-ZR15	4260266953342	1543896	13,99
B3175	digiCOVER basic Casio EX-ZR20	4260266954059	1537390	13,99
B3116	digiCOVER basic Casio EX-ZR200	4260266953335	1543895	13,99

B3523	digiCOVER basic CASIO EX-ZR700	4260342399088	1724283	13,99
B3020	digiCOVER basic Casio EX-ZS100	4260266959818	1478154	13,99
B3176	digiCOVER basic Casio EX-ZS12	4260266954066	1537391	13,99
B3019	digiCOVER basic Casio EX-ZS15	4260266959825	1478152	13,99
B3177	digiCOVER basic Casio EX-ZS150	4260266954073	1537392	13,99
B3334	digiCOVER basic Casio EXILIM EX-H50	4260342399514	1694211	13,99
B3335	digiCOVER basic Casio EXILIM EX-SZ200	4260342399453	1694212	13,99
B3337	digiCOVER basic Casio EXILIM EX-ZR1000	4260342399477	1694216	13,99
B3336	digiCOVER basic Casio EXILIM EX-ZR300	4260342399491	1694214	13,99
B2081	digiCOVER basic Casio FC100	4260125969316	1242075	13,99
B2080	digiCOVER basic Casio S12	4260125969309	1242074	13,99
B404H	digiCOVER basic do it your self Handy 2er	4260041672017	1309260	13,99
B404	digiCOVER basic DO IT YOUR SELF Single	4260125968487	1238428	13,99
404	digiCOVER basic do it yourself 3er	4260125961198	1132674	8,99
B2627	digiCOVER basic Fuji FinePix Fine Pix Real 3D W3	4260041675681	1333667	13,99
B2630	digiCOVER basic Fuji FinePix Fine Pix S2800HD	4260041675711	1333672	13,99
B2628	digiCOVER basic Fuji FinePix Fine Pix Z800	4260041675698	1333669	13,99
B2629	digiCOVER basic Fuji FinePix FinePix F300EXR	4260041675704	1333670	13,99
B3021	digiCOVER basic Fuji FinePix FinePix F600EXR	4260266959801	1478155	13,99
B2834	digiCOVER basic Fuji FinePix FinePix HS200EXR	4260041678620	1395864	13,99
B3022	digiCOVER basic Fuji FinePix FinePix JX370	4260266959795	1478157	13,99
B2833	digiCOVER basic Fuji FinePix FinePix S2950	4260041678613	1395863	13,99
B2837	digiCOVER basic Fuji FinePix FinePix S4000	4260041678651	1395869	13,99
B2835	digiCOVER basic Fuji FinePix FinePix T300	4260041678637	1395866	13,99
B3178	digiCOVER basic Fuji FinePix FinePix X PRO 1	4260266954981	1558496	13,99
B2836	digiCOVER basic Fuji FinePix FinePix XP30	4260041678644	1395867	13,99
B3125	digiCOVER basic Fuji FinePix F660	4260266953434	1518288	13,99
B3126	digiCOVER basic Fuji FinePix F770	4260266953441	1518289	13,99
B3124	digiCOVER basic Fuji FinePix HS 30 EXR / HS35EXR	4260266953427	1543902	13,99
B3132	digiCOVER basic Fuji FinePix JX250	4260266953526	1543906	13,99
B3131	digiCOVER basic Fuji FinePix JX500	4260266953519	1543905	13,99
B3133	digiCOVER basic Fuji FinePix JX520	4260266953533		13,99
B3130	digiCOVER basic Fuji FinePix JX580	4260266953502	1543904	13,99
B3129	digiCOVER basic Fuji FinePix JZ 250	4260266953496	1543903	13,99
B3127	digiCOVER basic Fuji FinePix S4200	4260266953458	1518290	13,99
B3122	digiCOVER basic Fuji FinePix SL300	4260266953403	1543900	13,99
B3123	digiCOVER basic Fuji FinePix T 400	4260266953410	1543901	13,99
B2899	digiCOVER basic Fuji FinePix X100 / X100S	4260266959955	1434542	13,99
B3128	digiCOVER basic Fuji FinePix XS1	4260266953465	1518291	13,99
B2934	digiCOVER basic Fuji FinePix Z900 EXR	4260266959849	1478265	13,99
B3664	digiCOVER basic Fuji X-A1	4260342398470	1783053	13,99
B3003	digiCOVER basic Fujifilm FinePix X10 / X20	4260266951607	1467638	13,99
B2112	digiCOVER basic Fujifilm Fine Pix F200EXR	4260125969842	1244506	13,99
B2256	digiCOVER basic Fujifilm Fine Pix F70EXR	4260041673137	1271066	13,99
B2113	digiCOVER basic Fujifilm Fine Pix S1500	4260125969859	1244507	13,99
B2257	digiCOVER basic Fujifilm Fine Pix S1500	4260041673144	1271067	13,99
B2754	digiCOVER basic Fujifilm FinePix AV200	4260041677067	1370090	13,99
B2753	digiCOVER basic Fujifilm FinePix AX300	4260041677050	1370088	13,99
B2746	digiCOVER basic Fujifilm FinePix F500EXR	4260041676985	1370080	13,99
B2747	digiCOVER basic Fujifilm FinePix F550EXR	4260041676992	1370081	13,99
B3471	digiCOVER basic Fujifilm FinePix F660EXR	4260342399330	1717965	13,99
B2423	digiCOVER basic Fujifilm FinePix F80EXR	4260041675087	1299638	13,99
B2424	digiCOVER basic Fujifilm FinePix HS10	4260041675094	1299639	13,99
B2420	digiCOVER basic Fujifilm FinePix JV100	4260041675056	1299635	13,99
B2751	digiCOVER basic Fujifilm FinePix JV200	4260041677036	1370086	13,99
B2421	digiCOVER basic Fujifilm FinePix JX200	4260041675063	1299636	13,99
B2752	digiCOVER basic Fujifilm FinePix JX300	4260041677043	1370087	13,99
B2750	digiCOVER basic Fujifilm FinePix JX350	4260041677029	1370084	13,99
B2422	digiCOVER basic Fujifilm FinePix JZ500 / JZ300	4260041675070	1299637	13,99
B2436	digiCOVER basic Fujifilm FinePix S1800	4260041675216	1299651	13,99
B2255	digiCOVER basic Fujifilm FinePix S2000hd	4260041673120	1271063	13,99
B2749	digiCOVER basic Fujifilm FinePix T200	4260041677012	1370083	13,99
B2258	digiCOVER basic Fujifilm FinePix Z300	4260041673151	1271068	13,99
B2427	digiCOVER basic Fujifilm FinePix Z300	4260041675124	1299642	13,99
B2259	digiCOVER basic Fujifilm FinePix Z35	4260041673168	1271070	13,99
B2260	digiCOVER basic Fujifilm FinePix Z37	4260041673175	1271071	13,99
B2425	digiCOVER basic Fujifilm FinePix Z70	4260041675100	1299640	13,99
B2426	digiCOVER basic Fujifilm FinePix Z700EXR	4260041675117	1299641	13,99
B2748	digiCOVER basic Fujifilm FinePix Z90	4260041677005	1370082	13,99
B3004	digiCOVER basic Fujifilm FinePix Z950EXR	4260266951614	1467641	13,99
B3436	digiCOVER basic Fujifilm HS50EXR	4260342399699	1694239	13,99
B3343	digiCOVER basic Fujifilm X-E1	4260266958330	1675308	13,99
B3729	digiCOVER basic Fujifilm X-E2	4260342398180	1797863	13,99
B3316	digiCOVER basic Fujifilm X-F1	4260266957272	1634375	13,99
B3642	digiCOVER basic Fujifilm X-M1	4260342398555	1829643	13,99
B3767	digiCOVER basic Fujifilm X-T1	4260342398067	1826566	13,99
B3727	digiCOVER basic Fujifilm XQ1	4260342398227	1797868	13,99
B2481H	digiCOVER basic HTC Desire	4260041678279	1393881	13,99
B2669H	digiCOVER basic HTC Desire HD	4260041678262	1393891	13,99
B2873H	digiCOVER basic HTC Desire S	4260266950075	1432697	13,99
B3405H	digiCOVER basic HTC One	4260342399392	1705986	13,99
B3574H	digiCOVER basic HTC One mini	4260342398579	1773045	13,99
B3225H	digiCOVER basic HTC One S	4260266959283		13,99
B2910H	digiCOVER basic HTC Sensation	4260266950112	1432701	13,99

B2541H	digiCOVER basic HTC Wildfire	4260041678255	1393889	13,99
B2895H	digiCOVER basic HTC Wildfire S	4260266950082	1432698	13,99
B3731	digiCOVER basic Leica C	4260342398142	1797875	13,99
B3359	digiCOVER basic Leica D-Lux 6	4260266958866	1738930	13,99
B3616	digiCOVER basic Leica X Vario	4260342398852	1773047	13,99
B2994	digiCOVER basic Nikon Coolpix P7100	4260266951515	1467619	13,99
B3679	digiCOVER basic Nikon 1 AW1	4260342391082	1783066	13,99
B3030	digiCOVER basic Nikon 1 J1 / J2	4260266959719	1478181	13,99
B3435	digiCOVER basic Nikon 1 J3	4260342399675	1694237	13,99
B3576	digiCOVER basic Nikon 1 S1	4260342398968	1738948	13,99
B3029	digiCOVER basic Nikon 1 V1	4260266959726	1478180	13,99
B3367	digiCOVER basic Nikon 1 V2	4260266958828	1665194	13,99
B3801	digiCOVER basic Nikon 1 V3	4260342397800	1837987	13,99
B2102	digiCOVER basic Nikon Coolpix L20	4260041671683	1252220	13,99
B3639	digiCOVER basic Nikon Coolpix A	4260342398692	1773062	13,99
B3028	digiCOVER basic Nikon Coolpix AW100	4260266959733	1478178	13,99
B2097	digiCOVER basic Nikon Coolpix L100	4260041671638	1252215	13,99
B2448	digiCOVER basic Nikon Coolpix L110	4260041675339	1299678	13,99
B2838	digiCOVER basic Nikon Coolpix L120	4260041678668	1395870	13,99
B3598	digiCOVER basic Nikon COOLPIX L610	4260342398913	1738946	13,99
B3184	digiCOVER basic Nikon Coolpix L810	4260266954134	1537402	13,99
B3430	digiCOVER basic Nikon Coolpix L820	4260342399538		13,99
B2447	digiCOVER basic Nikon Coolpix P100	4260041675322	1299676	13,99
B2842	digiCOVER basic Nikon Coolpix P300	4260041678712	1395875	13,99
B3185	digiCOVER basic Nikon Coolpix P310 / P330	4260266954141	1537403	13,99
B2839	digiCOVER basic Nikon Coolpix P500	4260041678675	1395871	13,99
B3186	digiCOVER basic Nikon Coolpix P510	4260266954158	1537404	13,99
B3422	digiCOVER basic Nikon COOLPIX P520	4260342399996	1694192	13,99
B2632	digiCOVER basic Nikon Coolpix P7000	4260041675735	1333675	13,99
B3310	digiCOVER basic Nikon Coolpix P7700	4260266957111	1634336	13,99
B3678	digiCOVER basic Nikon Coolpix P7800	4260342391051	1783064	13,99
B3428	digiCOVER basic Nikon Coolpix S01	4260342399651	1694235	13,99
B3074	digiCOVER basic Nikon Coolpix S100	4260266959436		13,99
B2261	digiCOVER basic Nikon Coolpix S1000pj	4260041673182	1271072	13,99
B2635	digiCOVER basic Nikon Coolpix S1100pj	4260041675766	1333680	13,99
B3027	digiCOVER basic Nikon Coolpix S1200pj	4260266959740	1478175	13,99
B2103	digiCOVER basic Nikon Coolpix S220	4260041671621	1252214	13,99
B2100	digiCOVER basic Nikon Coolpix S230	4260041671669	1252218	13,99
B3421	digiCOVER basic Nikon COOLPIX S2700	4260266958187	1694190	13,99
B2444	digiCOVER basic Nikon Coolpix S3000	4260041675292	1299670	13,99
B3420	digiCOVER basic Nikon COOLPIX S31	4260266958200	1694188	13,99
B2841	digiCOVER basic Nikon Coolpix S3100	4260041678699	1395874	13,99
B3809	digiCOVER basic Nikon Coolpix S32	4260342397640	1838004	13,99
B3179	digiCOVER basic Nikon Coolpix S3300	4260266954080	1537393	13,99
B3503	digiCOVER basic Nikon COOLPIX S3500	4260342399279	1717974	13,99
B2445	digiCOVER basic Nikon Coolpix S4000	4260041675308	1299672	13,99
B2844	digiCOVER basic Nikon Coolpix S4100	4260041678736	1395877	13,99
B3024	digiCOVER basic Nikon Coolpix S4150	4260266959771	1478159	13,99
B3180	digiCOVER basic Nikon Coolpix S4300	4260266954097	1537395	13,99
B2634	digiCOVER basic Nikon Coolpix S5100	4260041675759	1333678	13,99
B2840	digiCOVER basic Nikon Coolpix S5100	4260041678682	1395873	13,99
B3432	digiCOVER basic Nikon Coolpix S5200	4260342399576	1694229	13,99
B2855	digiCOVER basic Nikon Coolpix S6100	4260041678804	1395884	13,99
B3025	digiCOVER basic Nikon Coolpix S6150	4260266959764	1478160	13,99
B2099	digiCOVER basic Nikon Coolpix S620	4260041671652	1252217	13,99
B3026	digiCOVER basic Nikon Coolpix S6200	4260266959757	1478161	13,99
B2098	digiCOVER basic Nikon Coolpix S630	4260041671645	1252216	13,99
B3181	digiCOVER basic Nikon Coolpix S6300	4260266954103	1537397	13,99
B3434	digiCOVER basic Nikon Coolpix S6400	4260342399637	1694233	13,99
B3411	digiCOVER basic Nikon Coolpix S6500	4260266958293	1694208	13,99
B3625	digiCOVER basic Nikon Coolpix S6600	4260342398616	1773054	13,99
B3807	digiCOVER basic Nikon Coolpix S6800	4260342397688	1838000	13,99
B2633	digiCOVER basic Nikon Coolpix S80	4260041675742	1333677	13,99
B2446	digiCOVER basic Nikon Coolpix S8000	4260041675315	1299673	13,99
B2755	digiCOVER basic Nikon Coolpix S8100	4260041677074	1370092	13,99
B3023	digiCOVER basic Nikon Coolpix S8200	4260266959788	1478158	13,99
B2843	digiCOVER basic Nikon Coolpix S9100	4260041678729	1395876	13,99
B3182	digiCOVER basic Nikon Coolpix S9300	4260266954110	1537398	13,99
B3433	digiCOVER basic Nikon Coolpix S9400	4260342399552	1694227	13,99
B3423	digiCOVER basic Nikon COOLPIX S9500	4260342399972	1694194	13,99
B3808	digiCOVER basic Nikon Coolpix S9700	4260342397664	1838002	13,99
B2262	digiCOVER basic Nikon CoolpixS640	4260041673199	1271074	13,99
B2101	digiCOVER basic Nikon Coolpix L19	4260041671676	1252219	13,99
B1543	digiCOVER basic Nikon D3 / D3x	4260125969668	1244032	13,99
B1544	digiCOVER basic Nikon D300	4260125969675	1244033	13,99
B2263	digiCOVER basic Nikon D3000	4260041673205	1271075	13,99
B2677	digiCOVER basic Nikon D3100	4260041676428	1341029	13,99
B3251	digiCOVER basic Nikon D3200 / D3300	4260266955261	1562153	13,99
B3137	digiCOVER basic Nikon D4	4260266953588	1518295	13,99
B1114	digiCOVER basic Nikon D40 / D40x	4260125969644	1244026	13,99
B3797	digiCOVER basic Nikon D4s	4260342391631	1836483	13,99
B2159	digiCOVER basic Nikon D5000	4260041671508	1252201	13,99
B2880	digiCOVER basic Nikon D5100	4260041679115	1410456	13,99
B3386	digiCOVER basic Nikon D5200	4260266958415	1665184	13,99

B3725	digiCOVER basic Nikon D5300	4260342398265	1797879	13,99
B1698	digiCOVER basic Nikon D60	4260125969682	1244034	13,99
B3311	digiCOVER basic Nikon D600 / D7100	4260266957159	1634338	13,99
B3665	digiCOVER basic Nikon D610	4260342398418	1783051	13,99
B1854	digiCOVER basic Nikon D700	4260125969651	1244030	13,99
B2631	digiCOVER basic Nikon D7000	4260041675728	1333673	13,99
B3183	digiCOVER basic Nikon D800	4260266954127	1537400	13,99
B1970	digiCOVER basic Nikon D90	4260041670020	1246327	13,99
B3726	digiCOVER basic Nikon DF	4260342398241	1797872	13,99
B2083	digiCOVER basic Nikon P90	4260125969330	1242077	13,99
B2696H	digiCOVER basic Nokia C7	4260041678217	1393891	13,99
B2529H	digiCOVER basic Nokia N8	4260041678224	1393894	13,99
B2636	digiCOVER basic Olympus E-5	4260041675773	1333683	13,99
B2645	digiCOVER basic Olympus FE-5030	4260041675865	1333710	13,99
B2637	digiCOVER basic Olympus FE-5050	4260041675780	1333685	13,99
B2963	digiCOVER basic Olympus PEN E-P3	4260266959689	1478186	13,99
B3033	digiCOVER basic Olympus PEN E-PL3	4260266959672	1478197	13,99
B3034	digiCOVER basic Olympus PEN E-PM1	4260266959665	1478205	13,99
B3031	digiCOVER basic Olympus SP810 UZ	4260266959702	1478183	13,99
B3309	digiCOVER basic Olympus Stylus TG-1 / TG-2	4260266958286	1694178	13,99
B2845	digiCOVER basic Olympus SZ-20	4260041678743	1395878	13,99
B3188	digiCOVER basic Olympus TG-320	4260266954172	1537406	13,99
B3189	digiCOVER basic Olympus TG-620 7 TG 630	4260266954189	1537407	13,99
B3032	digiCOVER basic Olympus TG-810	4260266959696	1478185	13,99
B3190	digiCOVER basic Olympus TG-820 / TG-860	4260266954196	1537408	13,99
B3191	digiCOVER basic Olympus VG-170	4260266954202	1537409	13,99
B1793	digiCOVER basic Olympus E-420 / E-450	4260125969804	1244046	13,99
B1834	digiCOVER basic Olympus E-520	4260125969798	1244045	13,99
B2086	digiCOVER basic Olympus E-620	4260125969361	1242080	13,99
B2434	digiCOVER basic Olympus E-PL1	4260041675193	1299649	13,99
B2512	digiCOVER basic Olympus E600	4260220751939	1314518	13,99
B2123	digiCOVER basic Olympus FE-3000	4260041671577	1252209	13,99
B2251	digiCOVER basic Olympus FE-4000	4260041673083	1271054	13,99
B2513	digiCOVER basic Olympus FE-4030	4260220751922	1314519	13,99
B2253	digiCOVER basic Olympus FE-46	4260041673106	1271058	13,99
B2252	digiCOVER basic Olympus FE-5020	4260041673090	1271057	13,99
B2130	digiCOVER basic Olympus mju 5000	4260041671560	1252208	13,99
B2433	digiCOVER basic Olympus mju 5010	4260041675186	1299648	13,99
B2129	digiCOVER basic Olympus mju 6000	4260125969866	1244509	13,99
B2125	digiCOVER basic Olympus mju 7000	4260125969873	1244510	13,99
B2250	digiCOVER basic Olympus mju 7010	4260041673076	1271051	13,99
B2432	digiCOVER basic Olympus mju 7040	4260041675179	1299647	13,99
B2128	digiCOVER basic Olympus mju 8000	4260125969880	1244520	13,99
B2435	digiCOVER basic Olympus mju Tough 3000	4260041675209	1299650	13,99
B2254	digiCOVER basic Olympus mju Tough 6010	4260041673113	1271060	13,99
B2431	digiCOVER basic Olympus mju Tough 6020	4260041675162	1299646	13,99
B2430	digiCOVER basic Olympus mju Tough 8010	4260041675155	1299645	13,99
B3644	digiCOVER basic Olympus OM-D E-M1	4260342398517	1773068	13,99
B3187	digiCOVER basic Olympus OM-D E-M5	4260266954165	1537405	13,99
B2201	digiCOVER basic Olympus PEN E-P1 / E-P2	4260041762107		13,99
B3599	digiCOVER basic Olympus PEN E-P5	4260342398937	1738938	13,99
B2761	digiCOVER basic Olympus PEN E-PL2	4260041677135	1370099	13,99
B3304	digiCOVER basic Olympus PEN E-PL5	4260266957050	1634362	13,99
B3317	digiCOVER basic Olympus PEN E-PM2	4260266957029	1634358	13,99
B2127	digiCOVER basic Olympus SP-590UZ	4260125969897	1244523	13,99
B2428	digiCOVER basic Olympus SP-600UZ	4260041675131	1299643	13,99
B2756	digiCOVER basic Olympus SP-610UZ	4260041677081	1370093	13,99
B3308	digiCOVER basic Olympus SP-820UZ	4260266957081	1634370	13,99
B3750	digiCOVER basic Olympus Stylus 1	4260342398098	1826563	13,99
B3571	digiCOVER basic Olympus STYLUS SH-50	4260342398982	1738941	13,99
B3791	digiCOVER basic Olympus Stylus SP-100EE	4260342398005	1836434	13,99
B3482	digiCOVER basic Olympus Stylus SZ-16	4260342399316	1717971	13,99
B3570	digiCOVER basic Olympus STYLUS XZ-10	4260342399026	1738943	13,99
B3305	digiCOVER basic Olympus SZ-14	4260266958996	1634367	13,99
B2896	digiCOVER basic Olympus SZ-30 MR	4260041679344	1417291	13,99
B2757	digiCOVER basic Olympus TG-310	4260041677098	1370094	13,99
B2758	digiCOVER basic Olympus TG-610	4260041677104	1370096	13,99
B2759	digiCOVER basic Olympus VG-130	4260041677111	1370097	13,99
B2906	digiCOVER basic Olympus VR-320/330	4260266959948	1434543	13,99
B3193	digiCOVER basic Olympus VR-340 / VR-360	4260266954226	1537477	13,99
B2760	digiCOVER basic Olympus XZ-1	4260041677128	1370098	13,99
B3303	digiCOVER basic Olympus XZ-2	4260266957005	1634354	13,99
B2429	digiCOVER basic OlympusS P-800UZ	4260041675148	1299644	13,99
B555F	digiCOVER basic Order nach Wunsch Foto	4260041671836	1260710	13,99
B555H	digiCOVER basic Order nach Wunsch Handy	4260041671843	1266796	13,99
B2989	digiCOVER basic Panasonic DMC-FX90	4260266951461	1467562	13,99
B2990	digiCOVER basic Panasonic DMC-FZ150	4260266951478	1467563	13,99
B2988	digiCOVER basic Panasonic DMC-FZ48	4260266951454	1467560	13,99
B1879	digiCOVER basic Panasonic DMC FZ 28	4260125969774		13,99
B3444	digiCOVER basic Panasonic DMC-FH10	4260342399873	1694250	13,99
B2411	digiCOVER basic Panasonic DMC-FP1	4260220751342	1299627	13,99
B2769	digiCOVER basic Panasonic DMC-FP5	4260041677210	1370114	13,99
B2770	digiCOVER basic Panasonic DMC-FP7	4260041677227	1370118	13,99
B2274	digiCOVER basic Panasonic DMC-FP8	4260041673311	1271086	13,99

B2416	digiCOVER basic Panasonic DMC-FS10	4260041675018	1299631	13,99
B2417	digiCOVER basic Panasonic DMC-FS11	4260041675025	1299632	13,99
B2767	digiCOVER basic Panasonic DMC-FS16 / FH2	4260041677197	1370112	13,99
B2768	digiCOVER basic Panasonic DMC-FS18 / FH5	4260041677203	1370113	13,99
B2412	digiCOVER basic Panasonic DMC-FS30	4260041674981	1299628	13,99
B2414	digiCOVER basic Panasonic DMC-FS33	4260041674998	1299629	13,99
B2763	digiCOVER basic Panasonic DMC-FS35 / FH25	4260041677159	1370107	13,99
B2764	digiCOVER basic Panasonic DMC-FS37 / FH27	4260041677166	1370108	13,99
B3139	digiCOVER basic Panasonic DMC-FS40 / FH6	4260266953601	1518296	13,99
B3140	digiCOVER basic Panasonic DMC-FS45 / FH8	4260266953618	1518297	13,99
B3431	digiCOVER basic Panasonic DMC-FS50	4260342399590	1694230	13,99
B2148	digiCOVER basic Panasonic DMC-FS6	4260041671515	1252203	13,99
B2415	digiCOVER basic Panasonic DMC-FS62	4260041675001	1299630	13,99
B2854	digiCOVER basic Panasonic DMC-FT10	4260041678798	1395883	13,99
B3194	digiCOVER basic Panasonic DMC-FT20	4260266954233	1537412	13,99
B2849	digiCOVER basic Panasonic DMC-FT3	4260041678781	1395882	13,99
B3195	digiCOVER basic Panasonic DMC-FT4	4260266954240	1537413	13,99
B2273	digiCOVER basic Panasonic DMC-FX60	4260041673304	1271085	13,99
B2410	digiCOVER basic Panasonic DMC-FX66	4260041674974	1299626	13,99
B2848	digiCOVER basic Panasonic DMC-FX77	4260041678774	1395881	13,99
B3293	digiCOVER basic Panasonic DMC-FZ200	4260266956749	1634206	13,99
B2276	digiCOVER basic Panasonic DMC-FZ38	4260041673335	1271088	13,99
B3294	digiCOVER basic Panasonic DMC-FZ62	4260266956923	1634213	13,99
B3643	digiCOVER basic Panasonic DMC-FZ72	4260342398739	1773064	13,99
B1946	digiCOVER basic Panasonic DMC-G1K	4260125969835	1244049	13,99
B2918	digiCOVER basic Panasonic DMC-G3	4260266959986	1434536	13,99
B3291	digiCOVER basic Panasonic DMC-G5	4260266956732	1634210	13,99
B3525	digiCOVER basic Panasonic DMC-G6	4260342399125	1724287	13,99
B2272	digiCOVER basic Panasonic DMC-GF1	4260041673298	1271084	13,99
B2762	digiCOVER basic Panasonic DMC-GF2	4260041677142	1370102	13,99
B2953	digiCOVER basic Panasonic DMC-GF3 / GF3X	4260266959887	1466980	13,99
B3319	digiCOVER basic Panasonic DMC-GF5	4260266956701	1634211	13,99
B3569	digiCOVER basic Panasonic DMC-GF6	4260342399002	1738929	13,99
B3638	digiCOVER basic Panasonic DMC-GX 7	4260342398715	1773060	13,99
B3142	digiCOVER basic Panasonic DMC-GX1	4260266953649	1518303	13,99
B3546	digiCOVER basic Panasonic DMC-LF1	4260342399040	1727805	13,99
B3292	digiCOVER basic Panasonic DMC-LX7	4260266956770	1634209	13,99
B2765	digiCOVER basic Panasonic DMC-S1	4260041677173	1370110	13,99
B3138	digiCOVER basic Panasonic DMC-S2	4260266953595		13,99
B2766	digiCOVER basic Panasonic DMC-S3	4260041677180	1370111	13,99
B3141	digiCOVER basic Panasonic DMC-SZ1	4260266953625	1518301	13,99
B2707	digiCOVER basic Panasonic DMC-SZ7	4260266953632	1518302	13,99
B2418	digiCOVER basic Panasonic DMC-TZ10	4260041675032	1299633	13,99
B2846	digiCOVER basic Panasonic DMC-TZ18	4260041678750	1395879	13,99
B2847	digiCOVER basic Panasonic DMC-TZ22	4260041678767	1395880	13,99
B3196	digiCOVER basic Panasonic DMC-TZ25 / TZ31	4260266954257	1537414	13,99
B3419	digiCOVER basic Panasonic DMC-TZ41	4260266958224	1694184	13,99
B1718	digiCOVER basic Panasonic DMC-TZ5	4260125969828	1244048	13,99
B2419	digiCOVER basic Panasonic DMC-TZ8	4260041675049	1299634	13,99
B2275	digiCOVER basic Panasonic DMC-ZX1 / ZX3	4260041673328	1271087	13,99
B2076	digiCOVER basic Panasonic FS 15	4260125969262	1242070	13,99
B2074	digiCOVER basic Panasonic FS 25	4260125969248	1242068	13,99
B2077	digiCOVER basic Panasonic FS 7	4260125969279	1242071	13,99
B2079	digiCOVER basic Panasonic FX 40	4260125969293	1242073	13,99
B2073	digiCOVER basic Panasonic FX 550	4260125969231	1242067	13,99
B2510	digiCOVER basic Panasonic G2 / GH2	4260220751953	1314516	13,99
B3372	digiCOVER basic Panasonic GH3	4260266958484	1665181	13,99
B3683	digiCOVER basic Panasonic GM1	4260342398319	1783074	13,99
B2591	digiCOVER basic Panasonic Lumix DMC-FX 700	4260047004393	1331508	13,99
B2579	digiCOVER basic Panasonic Lumix DMC-FZ 100	4260041676213	1333748	13,99
B2584	digiCOVER basic Panasonic Lumix DMC-FZ 45	4260041676220	1333749	13,99
B2671	digiCOVER basic Panasonic Lumix DMC-LX5	4260041676411	1341028	13,99
B3426	digiCOVER basic Panasonic SZ3	4260342399934	1694202	13,99
B3425	digiCOVER basic Panasonic SZ9	4260342399910	1694200	13,99
B3424	digiCOVER basic Panasonic TZ 36	4260342399958	1694197	13,99
B3777	digiCOVER basic Panasonic TZ 56	4260342398043	1834646	13,99
B2075	digiCOVER basic Panasonic TZ 6	4260125969255	1242069	13,99
B3776	digiCOVER basic Panasonic TZ 61	4260342398029	1834645	13,99
B2078	digiCOVER basic Panasonic TZ 7	4260125969286	1242072	13,99
B3730	digiCOVER basic Panasonic XS-3	4260342398166	1797861	13,99
B3427	digiCOVER basic Panasonic XS1	4260342399897	1694205	13,99
B3285	digiCOVER basic Pentax K-30 / K-50	4260266959184	1593301	13,99
B3681	digiCOVER basic Pentax K-500	4260342391129	1783070	13,99
B3302	digiCOVER basic Pentax K-5II / K-5IIs	4260266956978	1634217	13,99
B1971	digiCOVER basic Pentax K-M / K-X	4260041674851		13,99
B2625	digiCOVER basic Pentax K-r	4260041675667	1333664	13,99
B3667	digiCOVER basic Pentax K3	4260342398357	1783048	13,99
B2622	digiCOVER basic Pentax K5	4260041675636	1333660	13,99
B3437	digiCOVER basic Pentax MX-1	4260342399712	1694241	13,99
B2463	digiCOVER basic Pentax Optio E90	4260041675483	1299708	13,99
B2459	digiCOVER basic Pentax Optio H90	4260041675445	1299700	13,99
B2458	digiCOVER basic Pentax Optio I-10	4260041675438	1299698	13,99
B2626	digiCOVER basic Pentax Optio M90	4260041675674	1333666	13,99
B2462	digiCOVER basic Pentax Optio P80	4260041675476	1299706	13,99

B2623	digiCOVER basic Pentax Optio RS1000	4260041675643	1333661	13,99
B2624	digiCOVER basic Pentax Optio RZ10	4260041675650	1333663	13,99
B2857	digiCOVER basic Pentax Optio S1	4260041678828	1395886	13,99
B2460	digiCOVER basic Pentax Optio W80	4260041675452	1299702	13,99
B2461	digiCOVER basic Pentax Optio W90	4260041675469	1299705	13,99
B2464	digiCOVER basic Pentax Optio WS80	4260041675490	1299710	13,99
B3005	digiCOVER basic Pentax Q	4260266951621	1467642	13,99
B3301	digiCOVER basic Pentax Q10	4260266957043	1634216	13,99
B3682	digiCOVER basic Pentax Q7 / Q10	4260342391136	1783072	13,99
B3007	digiCOVER basic Pentax RZ18	4260266951706	1478240	13,99
B3299	digiCOVER basic Pentax WG2	4260266959016	1634214	13,99
B2082	digiCOVER basic Pentax X 70	4260125969323	1242076	13,99
B3300	digiCOVER basic Pentax X5	4260266956947	1634215	13,99
B2196	digiCOVER basic PentaxK7	4260041672260	1267290	13,99
B2139	digiCOVER basic Ricoh CX1-5	4260125969903	1244526	13,99
B3035	digiCOVER basic Ricoh GR Digital IV	4260266959658	1478206	13,99
B3036	digiCOVER basic Ricoh PX	4260266959641	1478211	13,99
B2739	digiCOVER basic Rollei Flexline 250	4260041676916	1370067	13,99
B2640	digiCOVER basic Samsung NX100	4260041675810	1333701	13,99
B2647	digiCOVER basic Samsung PL200	4260041675889	1333733	13,99
B2639	digiCOVER basic Samsung WB2000	4260041675803	1333698	13,99
B3197	digiCOVER basic Samsung DV300F	4260266954264	1537416	13,99
B2455	digiCOVER basic Samsung ES70	4260041675407	1299695	13,99
B2597	digiCOVER basic Samsung ES75	4260047004447	1331514	13,99
B2449	digiCOVER basic Samsung EX1	4260041675346	1299680	13,99
B3338	digiCOVER basic Samsung EX2F	4260266956619	1675304	13,99
B2655H	digiCOVER basic Samsung Galaxy 551 / i5510	4260266959863		13,99
B2815H	digiCOVER basic Samsung Galaxy ACE	4260041678286	1393895	13,99
B3814	digiCOVER basic Samsung Galaxy Kamera 2	4260342397541	1838012	13,99
B3318	digiCOVER basic Samsung Galaxy Kamera	4260266956787	1634208	13,99
B2820H	digiCOVER basic Samsung Galaxy Mini S5570	4260266951003		13,99
B3637	digiCOVER basic Samsung Galaxy NX	4260342398753	1773059	13,99
B3412H	digiCOVER basic Samsung Galaxy S4 - i9500	4260342399415	1705974	13,99
B3516H	digiCOVER basic Samsung Galaxy S4 - MINI	4260342390740		13,99
B3641H	digiCOVER basic Samsung Galaxy S4 Zoom	4260342398531		13,99
B2072	digiCOVER basic Samsung HZ10W	4260125969224	1242066	13,99
B2069	digiCOVER basic Samsung HZ15W	4260125969194	1242063	13,99
B3353H	digiCOVER basic Samsung i8190 Galaxy S 3 mini	4260266958323		13,99
B2518H	digiCOVER basic Samsung i9000 Galaxy S	4260041676329	1393893	13,99
B2945H	digiCOVER basic Samsung i9001 Galaxy S plus	4260266959412	1502414	13,99
B2890H	digiCOVER basic Samsung i9100 Galaxy S2	4260266950143	1432704	13,99
B3242H	digiCOVER basic Samsung i9300 Galaxy S 3	4260266955315		13,99
B2996	digiCOVER basic Samsung MV800	4260266951539	1467622	13,99
B3321	digiCOVER basic Samsung MV900F	4260266956626	1634353	13,99
B3051H	digiCOVER basic Samsung N7000 Galaxy Note	4260266959429	1502413	13,99
B3815	digiCOVER basic Samsung NX 30	4260342397527	1838014	13,99
B2450	digiCOVER basic Samsung NX10 / NX5	4260041675353	1299681	13,99
B2778	digiCOVER basic Samsung NX11	4260041677302	1370139	13,99
B3284	digiCOVER basic Samsung NX20	4260266956589	1634350	13,99
B2995	digiCOVER basic Samsung NX200	4260266951522	1467621	13,99
B3618	digiCOVER basic Samsung NX2000	4260342398838	1773048	13,99
B3322	digiCOVER basic Samsung NX210	4260266956565	1634348	13,99
B3439	digiCOVER basic Samsung NX300	4260342399798	1694257	13,99
B2456	digiCOVER basic Samsung PL100	4260041675414	1299696	13,99
B2771	digiCOVER basic Samsung PL120	4260041677234	1370120	13,99
B2454	digiCOVER basic Samsung PL150	4260041675391	1299694	13,99
B2772	digiCOVER basic Samsung PL170	4260041677241	1370122	13,99
B2596	digiCOVER basic Samsung PL200	4260047004423	1331513	13,99
B2775	digiCOVER basic Samsung PL210	4260041677272	1370128	13,99
B2457	digiCOVER basic Samsung PL50	4260041675421	1299697	13,99
B2595	digiCOVER basic Samsung PL90	4260041676251	1333758	13,99
B2173H	digiCOVER basic Samsung S5230	4260266950136	1432703	13,99
B2519H	digiCOVER basic Samsung S8500 Wave	4260041676336	1393892	13,99
B2774	digiCOVER basic Samsung SH100	4260041677265	1370124	13,99
B2593	digiCOVER basic Samsung ST 100	4260041676237	1333752	13,99
B2594	digiCOVER basic Samsung ST 600	4260041676244	1333754	13,99
B2592	digiCOVER basic Samsung ST 80	4260047004409	1331511	13,99
B3198	digiCOVER basic Samsung ST200	4260266954288	1537417	13,99
B2135	digiCOVER basic Samsung ST50	4260041671522	1252204	13,99
B2452	digiCOVER basic Samsung ST5000	4260041675377	1299684	13,99
B2453	digiCOVER basic Samsung ST60	4260041675384	1299685	13,99
B3199	digiCOVER basic Samsung ST66 / ST77	4260266954295	1537418	13,99
B2773	digiCOVER basic Samsung ST700	4260041677258	1370123	13,99
B3200	digiCOVER basic Samsung ST88	4260266954301	1537419	13,99
B2997	digiCOVER basic Samsung ST93	4260266951546	1467624	13,99
B2087	digiCOVER basic Samsung TL320	4260125969378	1242081	13,99
B2729H	digiCOVER basic Samsung Wave II GT S 8530	4260041678293	1393894	13,99
B3812	digiCOVER basic Samsung WB 1100F	4260342397589	1838010	13,99
B3813	digiCOVER basic Samsung WB 2200F	4260342397565		13,99
B3811	digiCOVER basic Samsung WB 35F	4260342397602	1838008	13,99
B3810	digiCOVER basic Samsung WB 50F	4260342397626	1838006	13,99
B2136	digiCOVER basic Samsung WB100	4260041671539	1252205	13,99
B3398	digiCOVER basic Samsung WB100	4260342399613	1694207	13,99
B3201	digiCOVER basic Samsung WB150F	4260266954318	1537420	13,99

B2776	digiCOVER basic Samsung WB210	4260041677289	1370134	13,99
B3441	digiCOVER basic Samsung WB250F	4260342399750	1694245	13,99
B2137	digiCOVER basic Samsung WB500 / 510	4260041671546	1252206	13,99
B2138	digiCOVER basic Samsung WB550 / 560	4260041671553	1252207	13,99
B2451	digiCOVER basic Samsung WB600 /WB650	4260041675360	1299682	13,99
B2777	digiCOVER basic Samsung WB700	4260041677296	1370137	13,99
B2998	digiCOVER basic Samsung WB750	4260266951553	1467627	13,99
B3202	digiCOVER basic Samsung WB850	4260266954325	1537421	13,99
B3440	digiCOVER basic Samsung WB850F	4260342399736	1694243	13,99
B2638	digiCOVER basic Sanyo VPC-E1403	4260041675797	1333697	13,99
B2646	digiCOVER basic SanyoXcati-VPC1200/1220	4260041675872	1333731	13,99
B2576	digiCOVER basic Sigma SD15	4260266953328		13,99
B3604	digiCOVER basic Sony - Xperia M	4260342398128	1797866	13,99
B3397H	digiCOVER basic Sony - Xperia Z	4260342399378	1705590	13,99
B2599	digiCOVER basic Sony Alpha 290	4260041676190	1333746	13,99
B3666	digiCOVER basic Sony Alpha 3000	4260342398333	1783049	13,99
B2598	digiCOVER basic Sony Alpha 33/55	4260041676107	1333734	13,99
B2378	digiCOVER basic Sony Alpha 330	4260041674790	1291692	13,99
B2875	digiCOVER basic Sony Alpha 390	4260041678927	1404168	13,99
B3789	digiCOVER basic Sony Alpha 5000	4260342397961	1836466	13,99
B2600	digiCOVER basic Sony Alpha 560/580	4260047004331	1331505	13,99
B3790	digiCOVER basic Sony Alpha 6000	4260342397985	1836456	13,99
B3724	digiCOVER basic Sony Alpha 7 / 7R	4260342398203	1797864	13,99
B3331	digiCOVER basic Sony Alpha 99	4260266958934	1638449	13,99
B3443	digiCOVER basic Sony DSC-H200	4260342399859	1694249	13,99
B3787	digiCOVER basic Sony DSC-H400	4260342397923	1836475	13,99
B2442	digiCOVER basic Sony DSC-H55	4260041675278	1299665	13,99
B2782	digiCOVER basic Sony DSC-H70	4260041677340	1370154	13,99
B3203	digiCOVER basic Sony DSC-H90	4260266954332	1537422	13,99
B2116	digiCOVER basic Sony DSC-HX1	4260041671614	1252213	13,99
B2901	digiCOVER basic Sony DSC-HX100V	4260266959900	1478243	13,99
B3238	digiCOVER basic Sony DSC-HX10V	4260266959207	1593299	13,99
B3204	digiCOVER basic Sony DSC-HX200	4260266954349	1537423	13,99
B3205	digiCOVER basic Sony DSC-HX20V	4260266954356	1537424	13,99
B3483	digiCOVER basic Sony DSC-HX300	4260342399293	1717969	13,99
B3786	digiCOVER basic Sony DSC-HX400V	4260342397909	1836478	13,99
B3524	digiCOVER basic Sony DSC-HX50	4260342399101	1724341	13,99
B2437	digiCOVER basic Sony DSC-HX5VN	4260041675223	1299652	13,99
B3788	digiCOVER basic Sony DSC-HX60	4260342397947	1836473	13,99
B2779	digiCOVER basic Sony DSC-HX7V	4260041677319	1370145	13,99
B2898	digiCOVER basic Sony DSC-HX9V	4260266959917	1434548	13,99
B3390	digiCOVER basic Sony DSC-RX1	4260266958354	1665190	13,99
B3723	digiCOVER basic Sony DSC-RX10	4260342398289	1797877	13,99
B3276	digiCOVER basic Sony DSC-RX100	4260266959238	1593296	13,99
B3619	digiCOVER basic Sony DSC-RX100 M2	4260342398814	1773049	13,99
B2603	digiCOVER basic Sony DSC-S 2100	4260041676206	1333747	13,99
B2439	digiCOVER basic Sony DSC-S2100	4260041675247	1299654	13,99
B2784	digiCOVER basic Sony DSC-T110	4260041677364	1370161	13,99
B2085	digiCOVER basic Sony DSC-T90	4260125969354	1242079	13,99
B2084	digiCOVER basic Sony DSC-T900	4260125969347	1242078	13,99
B3429	digiCOVER basic Sony DSC-TF1	4260342399774	1694247	13,99
B3121	digiCOVER basic Sony DSC-TX 55	4260266953397	1518287	13,99
B2266	digiCOVER basic Sony DSC-TX1	4260041673236	1271078	13,99
B2783	digiCOVER basic Sony DSC-TX10	4260041677357	1370155	13,99
B2781	digiCOVER basic Sony DSC-TX100V	4260041677333	1370150	13,99
B3206	digiCOVER basic Sony DSC-TX20	4260266954363	1537425	13,99
B3620	digiCOVER basic Sony DSC-TX30	4260342398791	1773051	13,99
B2443	digiCOVER basic Sony DSC-TX5	4260041675285	1299669	13,99
B2389	digiCOVER basic Sony DSC-TX7	4260041675506	1299581	13,99
B2601	digiCOVER basic Sony DSC-TX9	4260047004348	1331506	13,99
B2268	digiCOVER basic Sony DSC-W180	4260041673250	1271080	13,99
B2115	digiCOVER basic Sony DSC-W220	4260125969910	1244527	13,99
B2114	digiCOVER basic Sony DSC-W290	4260125969927	1244529	13,99
B2441	digiCOVER basic Sony DSC-W320 / W350	4260041675261	1299656	13,99
B2440	digiCOVER basic Sony DSC-W360	4260041675254	1299655	13,99
B2438	digiCOVER basic Sony DSC-W380	4260041675230	1299653	13,99
B2642	digiCOVER basic Sony DSC-W390	4260041675834	1333706	13,99
B2789	digiCOVER basic Sony DSC-W510	4260041677418	1370168	13,99
B2788	digiCOVER basic Sony DSC-W530	4260041677401	1370166	13,99
B2787	digiCOVER basic Sony DSC-W560	4260041677395	1370165	13,99
B2786	digiCOVER basic Sony DSC-W570	4260041677388	1370164	13,99
B3118	digiCOVER basic Sony DSC-W610	4260266953359	1543897	13,99
B3119	digiCOVER basic Sony DSC-W620	4260266953366	1543898	13,99
B3120	digiCOVER basic Sony DSC-W650	4260266953373	1543899	13,99
B3207	digiCOVER basic Sony DSC-W690	4260266954370	1537426	13,99
B2267	digiCOVER basic Sony DSC-WX1	4260041673243	1271079	13,99
B2785	digiCOVER basic Sony DSC-WX10	4260041677371	1370162	13,99
B3544	digiCOVER basic Sony DSC-WX200	4260342399064	1727803	13,99
B3507	digiCOVER basic Sony DSC-WX300	4260342399217	1717979	13,99
B3785	digiCOVER basic Sony DSC-WX350	4260342397862	1836479	13,99
B2602	digiCOVER basic Sony DSC-WX5	4260047004355	1331507	13,99
B3208	digiCOVER basic Sony DSC-WX50 / WX100	4260266954387	1537427	13,99
B2856	digiCOVER basic Sony DSC-WX7	4260041678811	1395885	13,99
B3515	digiCOVER basic Sony DSC-WX80	4260342399170	1717983	13,99

B2780	digiCOVER basic Sony DSC-WX9	4260041677326	1370146	13,99
B1711	digiCOVER basic Sony DSLR-Alpha 200	4260125969705	1244036	13,99
B2202	digiCOVER basic Sony DSLR-Alpha 230	4260041762114	1267307	13,99
B1712	digiCOVER basic Sony DSLR-Alpha 300	4260125969712	1244037	13,99
B2999	digiCOVER basic Sony DSLR-Alpha 35	4260266951560	1467629	13,99
B1710	digiCOVER basic Sony DSLR-Alpha 350	4260125969699	1244035	13,99
B3274	digiCOVER basic Sony DSLR-Alpha 37 / 58	4260266959245	1593295	13,99
B2203	digiCOVER basic Sony DSLR-Alpha 380	4260041762121	1267167	13,99
B2270	digiCOVER basic Sony DSLR-Alpha 500	4260041673274	1271082	13,99
B2271	digiCOVER basic Sony DSLR-Alpha 550	4260041673281	1271083	13,99
B3001	digiCOVER basic Sony DSLR-Alpha 65V / 57	4260266951584	1467634	13,99
B1610	digiCOVER basic Sony DSLR-Alpha 700	4260125969729	1244038	13,99
B3002	digiCOVER basic Sony DSLR-Alpha 77V	4260266951591	1467636	13,99
B2269	digiCOVER basic Sony DSLR-Alpha 850	4260041673267	1271081	13,99
B1947	digiCOVER basic Sony DSLR-Alpha 900	4260125969736	1244039	13,99
B2862H	digiCOVER basic Sony Ericsson Xperia arc / arc S	4260266950099	1432699	13,99
B2874H	digiCOVER basic Sony Ericsson Xperia PLAY	4260266950105	1432700	13,99
B2478H	digiCOVER basic Sony Ericsson Xperia X 10	4260041678248	1393896	13,99
B2531H	digiCOVER basic Sony Ericsson Xperia X 10 mini	4260041678231	1393897	13,99
B2607H	digiCOVER basic Sony Ericsson Xperia X8	4260266951010		13,99
B2790	digiCOVER basic Sony MHS-FS3	4260041677425	1370169	13,99
B3680	digiCOVER basic Sony NEX 5T	4260342391099	1783067	13,99
B3143	digiCOVER basic Sony Nex 7	4260266953380	1518304	13,99
B2522	digiCOVER basic Sony NEX-3/NEX-5	4260220752011	1314520	13,99
B3477	digiCOVER basic Sony NEX-3N	4260342399354	1717967	13,99
B3371	digiCOVER basic Sony NEX-5R	4260266956657	1675302	13,99
B3332	digiCOVER basic Sony NEX-6	4260266958910	1638453	13,99
B3000	digiCOVER basic Sony NEX-C3 / NEX-5N	4260266951577	1467631	13,99
B3320	digiCOVER basic Sony NEX-F3	4260266956664	1634373	13,99
N412	digiCOVER premium 2,5 Zoll 4:3	4260125964618	1169165	15,99
N411	digiCOVER premium 2,7 Zoll 4:3	4260125968630	1234787	15,99
N411-169	digiCOVER premium 2,7 Zoll 16 : 9	4260220752400	1330749	15,99
N413-169	digiCOVER premium 2,8 Zoll 16 : 9	4260220752394	1330750	15,99
N413	digiCOVER premium 2,8 Zoll 4:3	4260125964625	1169166	15,99
N414-169	digiCOVER premium 3,0 Zoll 16 : 9	4260220752417	1330748	15,99
N414	digiCOVER premium 3,0 Zoll 4:3	4260125964632	1169167	15,99
N320-169	digiCOVER premium 3,2 Zoll 16 : 9	4260342391327	1812982	16,99
N320	digiCOVER premium 3,2 Zoll 4:3	4260266958767	1812981	16,99
N405-169	digiCOVER premium 3,5 Zoll 16 : 9	4260220752387	1330751	16,99
N405	digiCOVER premium 3,5 Zoll 4:3	4260125964649	1169168	16,99
N2505	digiCOVER premium Apple iPad	4260220752042	1315661	24,99
N2850	digiCOVER premium Apple iPad 2	4260041679023	1480598	24,99
N3214	digiCOVER premium Apple iPad 3	4260266954936		24,99
N3413	digiCOVER premium Apple iPad 4	4260342398111		24,99
N3355	digiCOVER premium Apple iPad mini	4260266958804		22,99
N1864	digiCOVER premium Apple iPhone 3G 3S	4260125967374	1244788	19,90
N1644	digiCOVER premium Apple iPhone 1. Generation	4260125965127		16,90
N2525	digiCOVER premium Apple iPhone 4. Generation	4260041676398	1341153	16,90
N1667	digiCOVER premium Apple iPod nano 3. Generation 2	4260125965950	1181161	15,90
N952	digiCOVER premium Apple iPod nano 4G	4260041671720		19,90
N2361	digiCOVER premium Apple iPod nano 5G 8/16GB	4260047004157	1337619	16,90
N3388	digiCOVER premium Apple iPod nano 7G	4260266958385	1665188	16,90
N1674	digiCOVER premium Apple iPod Touch 1. Generation	4260125965943	1181160	15,90
N2692	digiCOVER premium Apple iPod Touch 4. Generation	4260041676817	1346402	16,90
N3387	digiCOVER premium Apple iPod touch 5. Generation	4260266958408	1665186	16,99
N2991	digiCOVER premium Canon Digital IXUS 1100 HS	4260266951300	1467517	16,99
N2992	digiCOVER premium Canon Digital IXUS 230 HS	4260266951317	1467520	16,99
N2993	digiCOVER premium Canon PowerShot SX150 IS	4260266951324	1467524	16,99
N2067	digiCOVER premium Canon A1100 is	4260125969422	1242087	16,99
N2070	digiCOVER premium Canon A2100 is	4260125969453	1242090	16,99
N2615	digiCOVER premium Canon Digital IXUS 1000HS	4260041675926	1333785	16,99
N2402	digiCOVER premium Canon Digital IXUS 105 IS	4260220750048	1299722	16,99
N2824	digiCOVER premium Canon Digital IXUS 115 / 117 HS	4260041678323	1395827	16,99
N2277	digiCOVER premium Canon Digital IXUS 120 IS	4260041673687	1271138	16,99
N3135	digiCOVER premium Canon Digital IXUS 125 HS	4260266953199	1518276	16,99
N2403	digiCOVER premium Canon Digital IXUS 130 IS	4260220750055	1299723	16,99
N2278	digiCOVER premium Canon Digital IXUS 200 IS	4260041673694	1271139	16,99
N2409	digiCOVER premium Canon Digital IXUS 210 IS	4260220750116	1299729	16,99
N2823	digiCOVER premium Canon Digital IXUS 220 HS	4260041678316	1395826	16,99
N3136	digiCOVER premium Canon Digital IXUS 500 HS	4260266953205	1518277	16,99
N3171	digiCOVER premium Canon Digital IXUS 510 HS	4260266954462	1537436	16,99
N1513	digiCOVER premium Canon Digital IXUS 860 IS	4260125964724	1169178	16,99
N1805	digiCOVER premium Canon Digital IXUS 90	4260125966568	1193762	16,99
N1514	digiCOVER premium Canon Digital IXUS 960 IS	4260125964717	1169175	16,99
N1865	digiCOVER premium Canon EOS 1000 D	4260125967459	Art.-Nr.	16,99
N3502	digiCOVER premium Canon EOS 100D	4260342399262	1717972	16,99
N2830	digiCOVER premium Canon EOS 1100 D	4260041678347	1395830	16,99
N3784	digiCOVER premium Canon EOS 1200D	4260342397855	1836481	16,99
N1271	digiCOVER premium Canon EOS 1D Mark III	4260125964588	1169162	16,99
N2379	digiCOVER premium Canon EOS 1D Mark IV	4260041674820	1291698	16,99
N3168	digiCOVER premium Canon EOS 1D X	4260266954448	1537433	16,99
N1516	digiCOVER premium Canon EOS 1Ds Mark III	4260125964595	1169163	16,99
N437	digiCOVER premium Canon EOS 20D	4260125964540	1169158	16,99
N441	digiCOVER premium Canon EOS 30D	4260125964557	1169159	16,99

N417	digiCOVER premium Canon EOS 350D	4260125964571	1169161	16,99
N1039	digiCOVER premium Canon EOS 400 D	4260125964922	1169126	16,99
N1515	digiCOVER premium Canon EOS 40D	4260125964564	1169160	16,99
N1728	digiCOVER premium Canon EOS 450D / 500 D	4260125965820	1181144	16,99
N1889	digiCOVER premium Canon EOS 50 D	4260125967435	Art.-Nr.	16,99
N2401	digiCOVER premium Canon EOS 550D	4260220750031	1299720	16,99
N436	digiCOVER premium Canon EOS 5D	4260125964533	1169157	16,99
N1961	digiCOVER premium Canon EOS 5D Mark II	4260125968180	1220711	16,99
N3169	digiCOVER premium Canon EOS 5D Mark III	4260266954455	1537434	16,99
N2616	digiCOVER premium Canon EOS 60D / 600D	4260041675933	1333787	16,99
N3268	digiCOVER premium Canon EOS 650D / 700D	4260266959269	1593292	16,99
N3315	digiCOVER premium Canon EOS 6D	4260266957241	1634410	16,99
N3622	digiCOVER premium Canon EOS 70D	4260342398784	1773089	16,99
N2283	digiCOVER premium Canon EOS 7D	4260041673748	1271144	16,99
N3314	digiCOVER premium Canon EOS M	4260266957210	1634408	16,99
N2064	digiCOVER premium Canon IXUS 100 IS	4260125969392	1242084	16,99
N2063	digiCOVER premium Canon IXUS 110IS	4260125969385	1242082	16,99
N3522	digiCOVER premium Canon IXUS 135 / Ixus 132	4260342399156	1724339	16,99
N3442	digiCOVER premium Canon IXUS 140	4260342399842	1694253	16,99
N3806	digiCOVER premium Canon IXUS 145/150	4260342397718	1837997	16,99
N3805	digiCOVER premium Canon IXUS 155	4260342397732	1837995	16,99
N3295	digiCOVER premium Canon IXUS 240HS	4260266958958	1634204	16,99
N3415	digiCOVER premium Canon IXUS 255 HS	4260266958255	1694182	16,99
N3798	digiCOVER premium Canon IXUS 265 HS	4260342397831	1836488	16,99
N2511	digiCOVER premium Canon IXUS 300 HS	4260220751977	1314523	16,99
N2868	digiCOVER premium Canon IXUS 310 HS	4260041679320	1417288	16,99
N1264	digiCOVER premium Canon IXUS 75	4260125964762	1169193	16,99
N1982	digiCOVER premium Canon Ixus 870is	4260125968470	1225190	16,99
N2065	digiCOVER premium Canon IXUS 95 IS	4260125969408	1242085	16,99
N1989	digiCOVER premium Canon Ixus 980is	4260125968463	1225188	16,99
N2071	digiCOVER premium Canon IXUS 990 IS	4260125969460	1242091	16,99
N2614	digiCOVER premium Canon PowerShot S95	4260041675919	1333783	16,99
N2279	digiCOVER premium Canon PowerShot 120 IS	4260041673700	1271140	16,99
N2743	digiCOVER premium Canon PowerShot 3300	4260041677470	1370205	16,99
N2741	digiCOVER premium Canon PowerShot A1200	4260041677456	1370182	16,99
N2742	digiCOVER premium Canon PowerShot A2200	4260041677463	1370189	16,99
N3165	digiCOVER premium Canon PowerShot A2300 / A2400 IS	4260266954400	1537428	16,99
N2404	digiCOVER premium Canon PowerShot A3000 IS	4260220750062	1299724	16,99
N2405	digiCOVER premium Canon PowerShot A3100 IS	4260220750079	1299725	16,99
N3166	digiCOVER premium Canon PowerShot A3400 IS / A4000 IS	4260266954417	1537430	16,99
N2406	digiCOVER premium Canon PowerShot A490	4260220750086	1299726	16,99
N2407	digiCOVER premium Canon PowerShot A495	4260220750093	1299727	16,99
N2740	digiCOVER premium Canon PowerShot A800	4260041677449	1370178	16,99
N3167	digiCOVER premium Canon PowerShot D20	4260266954431	1537432	16,99
N3802	digiCOVER premium Canon PowerShot D30	4260342397794	1837988	16,99
N3212	digiCOVER premium Canon PowerShot ELPH 110 HS	4260266954424	1537431	16,99
N1999	digiCOVER premium Canon PowerShot G10	4260125968432	1225182	16,99
N2282	digiCOVER premium Canon PowerShot G11	4260041673731	1271143	16,99
N2612	digiCOVER premium Canon PowerShot G12	4260041675896	1333780	16,99
N3344	digiCOVER premium Canon PowerShot G15	4260266958897	1665191	16,99
N3634	digiCOVER premium Canon PowerShot G16	4260342398685	1773091	16,99
N3134	digiCOVER premium Canon PowerShot G1X	4260266953182	1518273	16,99
N3804	digiCOVER premium Canon PowerShot G1X	4260342397756	1837993	16,99
N1519	digiCOVER premium Canon PowerShot G9	4260125964731	1169179	16,99
N3438	digiCOVER premium Canon PowerShot N	4260342399828	1694255	16,99
N3803	digiCOVER premium Canon PowerShot N100	4260342397770	1837991	16,99
N3095	digiCOVER premium Canon PowerShot S100	4260266955001		16,99
N3313	digiCOVER premium Canon PowerShot S110	4260266957203	1634404	16,99
N3677	digiCOVER premium Canon PowerShot S120	4260342391044	1783059	16,99
N1520	digiCOVER premium Canon PowerShot S5 IS	4260125964748	1169180	16,99
N2281	digiCOVER premium Canon PowerShot S90	4260041673724	1271142	16,99
N3636	digiCOVER premium Canon PowerShot SX 170IS	4260342398647	1773093	16,99
N3508	digiCOVER premium Canon PowerShot SX 270/280HS	4260342399248	1716399	16,99
N3514	digiCOVER premium Canon PowerShot SX 500 IS	4260342399200	1717987	16,99
N3635	digiCOVER premium Canon PowerShot SX 510HS	4260342398661	1773092	16,99
N3796	digiCOVER premium Canon PowerShot SX 600 / 700 HS	4260342391495	1836486	16,99
N1521	digiCOVER premium Canon PowerShot SX100 IS	4260125964755	1169192	16,99
N2613	digiCOVER premium Canon PowerShot SX130 IS	4260041675902	1333782	16,99
N2037	digiCOVER premium Canon PowerShot SX1s	4260125968739	1234792	16,99
N2280	digiCOVER premium Canon PowerShot SX20 IS	4260041673717	1271141	16,99
N2408	digiCOVER premium Canon PowerShot SX210 IS	4260220750109	1299728	16,99
N2829	digiCOVER premium Canon PowerShot SX220 / SX230 HS	4260041678330	1395829	16,99
N3172	digiCOVER premium Canon PowerShot SX240 HS / SX260 HS	4260266954479	1537437	16,99
N2066	digiCOVER premium Canon SX 200 is	4260125969415	1242086	16,99
N2068	digiCOVER premium Canon SX10 is	4260125969439	1242088	16,99
N3228	digiCOVER premium Canon SX40	4260266955193	1558772	16,99
N3312	digiCOVER premium Canon SX50 HS	4260266957173	1634401	16,99
N1745	digiCOVER premium Casio EX-F1	4260125966452	1188937	16,99
N2400	digiCOVER premium Casio EX-FH100	4260220750024	1299713	16,99
N2643	digiCOVER premium Casio EX-FH20	4260041676084	1333820	16,99
N2621	digiCOVER premium Casio EX-FH25	4260041675940	1333792	16,99
N2119	digiCOVER premium Casio EX-FS10	4260041671386	1252184	16,99
N2210	digiCOVER premium Casio EX-H10 / H15	4260041672253	1267308	16,99
N2735	digiCOVER premium Casio EX-H20	4260266951164	1478266	16,99

N2831	digiCOVER premium Casio EX-H30	4260041678354	1395831	16,99
N2745	digiCOVER premium Casio EX-TR100 TRYX	4260041677494	1370209	16,99
N1524	digiCOVER premium Casio EX-V8 Hi-Zoom	4260125964786	1169196	16,99
N2121	digiCOVER premium Casio EX-Z1	4260041671409	1252186	16,99
N2399	digiCOVER premium Casio EX-Z2000	4260220750017	1299712	16,99
N2178	digiCOVER premium Casio EX-Z22	4260041672314	1267311	16,99
N2120	digiCOVER premium Casio EX-Z270	4260041671393	1252185	16,99
N3173	digiCOVER premium Casio EX-Z28	4260266954486	1537438	16,99
N2088	digiCOVER premium Casio EX-Z400	4260041671492	1252200	16,99
N2264	digiCOVER premium Casio EX-Z450	4260041673557	1271117	16,99
N3174	digiCOVER premium Casio EX-Z690	4260266954493	1537440	16,99
N2265	digiCOVER premium Casio EX-Z90	4260041673564	1271118	16,99
N2618	digiCOVER premium Casio EX-ZR10	4260266951171	1478267	16,99
N2744	digiCOVER premium Casio EX-ZR100	4260041677487	1370208	16,99
N3117	digiCOVER premium Casio EX-ZR15	4260266952987		16,99
N3175	digiCOVER premium Casio EX-ZR20	4260266954509	1537441	16,99
N3116	digiCOVER premium Casio EX-ZR200	4260266952970		16,99
N3523	digiCOVER premium CASIO EX-ZR700	4260342399095	1724285	16,99
N3020	digiCOVER premium Casio EX-ZS100	4260266959627	1478214	16,99
N3176	digiCOVER premium Casio EX-ZS12	4260266954516	1537443	16,99
N3019	digiCOVER premium Casio EX-ZS15	4260266959634	1478213	16,99
N3177	digiCOVER premium Casio EX-ZS150	4260266954523	1537444	16,99
N3334	digiCOVER premium Casio EXILIM EX-H50	4260342399460		16,99
N3335	digiCOVER premium Casio EXILIM EX-SZ200	4260342399521	1694210	16,99
N3337	digiCOVER premium Casio EXILIM EX-ZR1000	4260342399484	1694219	16,99
N3336	digiCOVER premium Casio EXILIM EX-ZR300	4260342399507	1694213	16,99
N2081	digiCOVER premium Casio FC100	4260125969569	1242101	16,99
N2080	digiCOVER premium Casio S12	4260125969552	1242100	16,99
N1470	digiCOVER premium Casio Z1200	4260125964779	1169194	16,99
N403	digiCOVER premium do it yourself 95x65 mm	4260125964915	1169211	16,99
N3021	digiCOVER premium Fuji FinePix F600EXR	4260266959610	1478215	16,99
N3125	digiCOVER premium Fuji FinePix F660	4260266953076	1518268	16,99
N3126	digiCOVER premium Fuji FinePix F770	4260266953083	1518270	16,99
N3124	digiCOVER premium Fuji FinePix HS30EXR / HS35EXR	4260266953069	1518267	16,99
N3132	digiCOVER premium Fuji FinePix JX250	4260266953168		16,99
N3022	digiCOVER premium Fuji FinePix JX370	4260266959603	1478217	16,99
N3131	digiCOVER premium Fuji FinePix JX500	4260266953151		16,99
N3133	digiCOVER premium Fuji FinePix JX520	4260266953175		16,99
N3130	digiCOVER premium Fuji FinePix JX580	4260266953144		16,99
N3129	digiCOVER premium Fuji FinePix JZ250	4260266953137		16,99
N3127	digiCOVER premium Fuji FinePix S4200	4260266953090	1518271	16,99
N3122	digiCOVER premium Fuji FinePix SL300	4260266953045		16,99
N3123	digiCOVER premium Fuji FinePix T400	4260266953052		16,99
N3178	digiCOVER premium Fuji FinePix X PRO 1	4260266954974	1638434	16,99
N2899	digiCOVER premium Fuji FinePix X100 / X100S	4260266959962	1434540	16,99
N3128	digiCOVER premium Fuji FinePix XS1	4260266953106	1518272	16,99
N2934	digiCOVER premium Fuji FinePix Z900 EXR	4260266959856	1478264	16,99
N3003	digiCOVER premium Fujifilm FinePix X10 / X20	4260266951423	1467554	16,99
N3004	digiCOVER premium Fujifilm FinePix Z950EXR	4260266951430	1467556	16,99
N2112	digiCOVER premium Fujifilm Fine Pix F200EXR	4260125969934	1244541	16,99
N2113	digiCOVER premium Fujifilm Fine Pix S1500	4260125969941	1244542	16,99
N2754	digiCOVER premium Fujifilm FinePix AV200	4260041677586	1370218	16,99
N2753	digiCOVER premium Fujifilm FinePix AX300	4260041677579	1370217	16,99
N2629	digiCOVER premium Fujifilm FinePix F300EXR	4260041676015	1333805	16,99
N2746	digiCOVER premium Fujifilm FinePix F500EXR	4260041677500	1370210	16,99
N2747	digiCOVER premium Fujifilm FinePix F550EXR	4260041677517	1370211	16,99
N3471	digiCOVER premium Fujifilm FinePix F660EXR	4260342399347	1717964	16,99
N2256	digiCOVER premium Fujifilm FinePix F70EXR	4260041673472	1271105	16,99
N2423	digiCOVER premium Fujifilm FinePix F80EXR	4260220750253	1299749	16,99
N2424	digiCOVER premium Fujifilm FinePix HS10	4260220750260	1299750	16,99
N2834	digiCOVER premium Fujifilm FinePix HS20EXR	4260041678385	1395833	16,99
N2420	digiCOVER premium Fujifilm FinePix JV100	4260220750222	1299744	16,99
N2751	digiCOVER premium Fujifilm FinePix JV200	4260041677555	1370215	16,99
N2421	digiCOVER premium Fujifilm FinePix JX200	4260220750239	1299746	16,99
N2752	digiCOVER premium Fujifilm FinePix JX300	4260041677562	1370216	16,99
N2750	digiCOVER premium Fujifilm FinePix JX350	4260041677548	1370214	16,99
N2422	digiCOVER premium Fujifilm FinePix JZ500	4260220750246	1299747	16,99
N2627	digiCOVER premium Fujifilm FinePix Real 3D W3	4260041675995	1333803	16,99
N2257	digiCOVER premium Fujifilm FinePix S1500	4260041673489	1271106	16,99
N2436	digiCOVER premium Fujifilm FinePix S1800	4260220750383	1299766	16,99
N2255	digiCOVER premium Fujifilm FinePix S2000hd	4260041673465	1271104	16,99
N2630	digiCOVER premium Fujifilm FinePix S2800HD	4260041676022	1333810	16,99
N2833	digiCOVER premium Fujifilm FinePix S2950	4260041678361	1395832	16,99
N2837	digiCOVER premium Fujifilm FinePix S4000	4260041678408	1395837	16,99
N2749	digiCOVER premium Fujifilm FinePix T200	4260041677531	1370213	16,99
N2835	digiCOVER premium Fujifilm FinePix T300	4260041678378	1395835	16,99
N2836	digiCOVER premium Fujifilm FinePix XP30	4260041678392	1395836	16,99
N2258	digiCOVER premium Fujifilm FinePix Z300	4260041673496	1271107	16,99
N2427	digiCOVER premium Fujifilm FinePix Z300	4260220750291	1299753	16,99
N2259	digiCOVER premium Fujifilm FinePix Z35	4260041673502	1271108	16,99
N2260	digiCOVER premium Fujifilm FinePix Z37	4260041673519	1271109	16,99
N2425	digiCOVER premium Fujifilm FinePix Z70	4260220750277	1299751	16,99
N2426	digiCOVER premium Fujifilm FinePix Z700EXR	4260220750284	1299752	16,99
N2628	digiCOVER premium Fujifilm FinePix Z800	4260041676008	1333804	16,99

N2748	digiCOVER premium Fujifilm FinePix Z90	4260041677524	1370212	16,99
N3436	digiCOVER premium Fujifilm HS50EXR	4260342399705	1694238	16,99
N3664	digiCOVER premium Fujifilm X-A1	4260342398487	1783058	16,99
N3343	digiCOVER premium Fujifilm X-E1	4260266958347	1675309	16,99
N3729	digiCOVER premium Fujifilm X-E2	4260342398197		16,99
N3316	digiCOVER premium Fujifilm X-F1	4260266957289	1634424	16,99
N3642	digiCOVER premium Fujifilm X-M1	4260342398562	1829642	16,99
N3767	digiCOVER premium Fujifilm X-T1	4260342398074	1826565	16,99
N3727	digiCOVER premium Fujifilm XQ1	4260342398234	1797869	16,99
N2481H	digiCOVER premium HTC Desire	4260266951140		12,99
N3277H	digiCOVER premium HTC Desire C	4260266956817		12,99
N2669H	digiCOVER premium HTC Desire HD	4260266951133		12,99
N2873H	digiCOVER premium HTC Desire S	4260266951096		12,99
N3405H	digiCOVER premium HTC One	4260342399408	1705979	12,99
N3574H	digiCOVER premium HTC One mini	4260342398586		12,99
N3225H	digiCOVER premium HTC One S	4260266959290		12,99
N3231H	digiCOVER premium HTC One V	4260266956800		12,99
N2541H	digiCOVER premium HTC Wildfire	4260266951126		12,99
N2895H	digiCOVER premium HTC Wildfire S	4260266951089		12,99
N3731	digiCOVER premium Leica C	4260342398159	1797874	16,99
N2000	digiCOVER premium Leica C-Lux 3	4260125968456	1225186	16,99
N1197	digiCOVER premium Leica D-Lux 3	4260125964793	1169198	16,99
N1984	digiCOVER premium Leica D-Lux 4	4260125968449	1225184	16,99
N3359	digiCOVER premium Leica D-Lux 6	4260266958859		16,99
N2673	digiCOVER premium Leica Dlux5	4260041676800		16,99
N3418	digiCOVER premium Leica M	4260266958248	1694183	16,99
N1115	digiCOVER premium Leica M8 / M8.2 / M9	4260125964939	1169197	16,99
N2295	digiCOVER premium Leica S2	4260220751588		16,99
N2515	digiCOVER premium Leica V Lux 20	4260220751649		16,99
N2697	digiCOVER premium Leica V-Lux 2	4260041676862		16,99
N2919	digiCOVER premium Leica V-Lux 30	4260266959993	1434538	16,99
N3357	digiCOVER premium Leica V-Lux 4	4260266958835		16,99
N3358	digiCOVER premium Leica V-Lux 40	4260266958873		16,99
N2294	digiCOVER premium Leica X 1 / X2	4260220751571		16,99
N3616	digiCOVER premium Leica X Vario	4260342398869	1773077	16,99
N2994	digiCOVER premium Nikon Coolpix P7100	4260266951331	1467527	16,99
N3679	digiCOVER premium Nikon 1 AW1	4260342391075	1783065	16,99
N3030	digiCOVER premium Nikon 1 J1 / J2	4260266959528	1478228	16,99
N3435	digiCOVER premium Nikon 1 J3	4260342399682	1694236	16,99
N3576	digiCOVER premium Nikon 1 S1	4260342398975	1738949	16,99
N3029	digiCOVER premium Nikon 1 V1	4260266959535	1478227	16,99
N3367	digiCOVER premium Nikon 1 V2	4260266958811	1665193	16,99
N3801	digiCOVER premium Nikon 1 V3	4260342397817	1837986	16,99
N3639	digiCOVER premium Nikon Coolpix A	4260342398708	1773096	16,99
N3028	digiCOVER premium Nikon Coolpix AW100	4260266959542	1478226	16,99
N2097	digiCOVER premium Nikon Coolpix L100	4260041671430	1252189	16,99
N2448	digiCOVER premium Nikon Coolpix L110	4260220750505	1299782	16,99
N2838	digiCOVER premium Nikon Coolpix L120	4260041678415	1395838	16,99
N2101	digiCOVER premium Nikon Coolpix L19	4260041671478	1252197	16,99
N2102	digiCOVER premium Nikon Coolpix L20	4260041671485	1252199	16,99
N3598	digiCOVER premium Nikon COOLPIX L610	4260342398920	1738947	16,99
N3184	digiCOVER premium Nikon Coolpix L810	4260266954592	1537450	16,99
N3430	digiCOVER premium Nikon Coolpix L820	4260342399545	1694225	16,99
N2447	digiCOVER premium Nikon Coolpix P100	4260220750499	1299781	16,99
N2842	digiCOVER premium Nikon Coolpix P300	4260041678453	1395842	16,99
N3185	digiCOVER premium Nikon Coolpix P310 / P330	4260266954608	1537451	16,99
N1537	digiCOVER premium Nikon Coolpix P50	4260125964878	1169207	16,99
N2839	digiCOVER premium Nikon Coolpix P500	4260041678439	1395839	16,99
N3186	digiCOVER premium Nikon Coolpix P510	4260266954615	1537453	16,99
N1538	digiCOVER premium Nikon Coolpix P5100	4260125964885	1169208	16,99
N3422	digiCOVER premium Nikon COOLPIX P520	4260266958170	1727801	16,99
N2632	digiCOVER premium Nikon Coolpix P7000	4260041676046	1333813	16,99
N3310	digiCOVER premium Nikon Coolpix P7700	4260266957128	1634395	16,99
N3678	digiCOVER premium Nikon Coolpix P7800	4260342391068	1783063	16,99
N3428	digiCOVER premium Nikon Coolpix S01	4260342399668	1694234	16,99
N3074	digiCOVER premium Nikon Coolpix S100	4260266959443		16,99
N2261	digiCOVER premium Nikon Coolpix S1000pj	4260041673526	1271110	16,99
N3027	digiCOVER premium Nikon Coolpix S1200pj	4260266959559	1478224	16,99
N2103	digiCOVER premium Nikon Coolpix S220	4260041671423	1252188	16,99
N2100	digiCOVER premium Nikon Coolpix S230	4260041671461	1252196	16,99
N3421	digiCOVER premium Nikon COOLPIX S2700	4260266958194	1694191	16,99
N2444	digiCOVER premium Nikon Coolpix S3000	4260220750468	1299778	16,99
N3420	digiCOVER premium Nikon COOLPIX S31	4260266958217	1694189	16,99
N2841	digiCOVER premium Nikon Coolpix S3100	4260041678446	1395841	16,99
N3809	digiCOVER premium Nikon Coolpix S32	4260342397657	1838003	16,99
N3179	digiCOVER premium Nikon Coolpix S3300	4260266954547	1537445	16,99
N3503	digiCOVER premium Nikon COOLPIX S3500	4260342399286	1716397	16,99
N2445	digiCOVER premium Nikon Coolpix S4000	4260220750475	1299779	16,99
N2844	digiCOVER premium Nikon Coolpix S4100	4260041678415	1395838	16,99
N3024	digiCOVER premium Nikon Coolpix S4150	4260266959580	1478219	16,99
N3180	digiCOVER premium Nikon Coolpix S4300	4260266954554	1537446	16,99
N1539	digiCOVER premium Nikon Coolpix S51	4260125964847	1169203	16,99
N1540	digiCOVER premium Nikon Coolpix S510	4260125964953	1169205	16,99
N2840	digiCOVER premium Nikon Coolpix S5100	4260041678422	1395840	16,99

N1541	digiCOVER premium Nikon Coolpix S51c	4260125964854	1169204	16,99
N3432	digiCOVER premium Nikon Coolpix S5200	4260342399583	1694228	16,99
N2855	digiCOVER premium Nikon Coolpix S6100	4260041678538	1395852	16,99
N3025	digiCOVER premium Nikon Coolpix S6150	4260266959573	1478221	16,99
N2099	digiCOVER premium Nikon Coolpix S620	4260041671454	1252195	16,99
N3026	digiCOVER premium Nikon Coolpix S6200	4260266959566	1478222	16,99
N2098	digiCOVER premium Nikon Coolpix S630	4260041671447	1252194	16,99
N3181	digiCOVER premium Nikon Coolpix S6300	4260266954561	1537447	16,99
N3434	digiCOVER premium Nikon Coolpix S6400	4260342399644	1694232	16,99
N3411	digiCOVER premium Nikon Coolpix S6500	4260266958309	1694209	16,99
N3625	digiCOVER premium Nikon CoolPix S6600	4260342398623	1773090	16,99
N3807	digiCOVER premium Nikon Coolpix S6800	4260342397695	1837999	16,99
N1542	digiCOVER premium Nikon Coolpix S700	4260125964861	1169206	16,99
N2446	digiCOVER premium Nikon Coolpix S8000	4260220750482	1299780	16,99
N2755	digiCOVER premium Nikon Coolpix S8100	4260041677593	1370219	16,99
N3023	digiCOVER premium Nikon Coolpix S8200	4260266959597	1478218	16,99
N2843	digiCOVER premium Nikon Coolpix S9100	4260041678460	1395844	16,99
N3182	digiCOVER premium Nikon Coolpix S9300	4260266954578	1537448	16,99
N3433	digiCOVER premium Nikon Coolpix S9400	4260342399569	1694226	16,99
N3423	digiCOVER premium Nikon COOLPIX S9500	4260342399989	1694195	16,99
N3808	digiCOVER premium Nikon Coolpix S9700	4260342397671	1838001	16,99
N2262	digiCOVER premium Nikon CoolpixS640	4260041673533	1271112	16,99
N619	digiCOVER premium Nikon D200 / Fuji S5 Pro	4260125964465	1169136	16,99
N629	digiCOVER premium Nikon D2X	4260125964526	1169156	16,99
N1076	digiCOVER premium Nikon D2Xs	4260125964519	1169155	16,99
N1543	digiCOVER premium Nikon D3 / D3x	4260125964502	1169154	16,99
N1544	digiCOVER premium Nikon D300 / 300s	4260125964458	1169134	16,99
N2263	digiCOVER premium Nikon D3000	4260041673540	1271116	16,99
N2677	digiCOVER premium Nikon D3100	4260041676435	1341030	16,99
N3251	digiCOVER premium Nikon D3200 / D3300	4260266955278	1562154	16,99
N3137	digiCOVER premium Nikon D4	4260266953229	1518278	16,99
N1466	digiCOVER premium Nikon D40 / D40x	4260125964472	1169137	16,99
N3797	digiCOVER premium Nikon D4s	4260342391648	1837985	16,99
N630	digiCOVER premium Nikon D50	4260125964489	1169138	16,99
N2159	digiCOVER premium Nikon D5000	4260041671300	1252173	16,99
N2880	digiCOVER premium Nikon D5100	4260041679108	1410450	16,99
N3386	digiCOVER premium Nikon D5200	4260266958422	1665183	16,99
N3725	digiCOVER premium Nikon D5300	4260342398272	1797878	16,99
N1698	digiCOVER premium Nikon D60	4260125965899	1181154	16,99
N3311	digiCOVER premium Nikon D600 / D7100	4260266957166	1634398	16,99
N3665	digiCOVER premium Nikon D610	4260342398425	1783057	16,99
N1854	digiCOVER premium Nikon D700	4260125967367		16,99
N2631	digiCOVER premium Nikon D7000	4260041676039	1333811	16,99
N1075	digiCOVER premium Nikon D80	4260125964496	1169139	16,99
N3183	digiCOVER premium Nikon D800	4260266954585	1537449	16,99
N1970	digiCOVER premium Nikon D90	4260125968166	1220709	16,99
N3726	digiCOVER premium Nikon DF	4260342398258	1797870	16,99
N2083	digiCOVER premium Nikon P90	4260125969583	1242103	16,99
N2696H	digiCOVER premium Nokia C7	4260266951102		12,99
N3059H	digiCOVER premium Nokia Lumia 800	4260266954943		12,99
N2529H	digiCOVER premium Nokia N8	4260266951119		12,99
N2201	digiCOVER premium Olympus PEN E-P1/P2	4260041762077	1267314	16,99
N2044	digiCOVER premium Olympus E-30	4260125968722	1234790	16,99
N1272	digiCOVER premium Olympus E-410	4260125964441	1169133	16,99
N1793	digiCOVER premium Olympus E-420 / E-450	4260125968197	1221147	16,99
N2636	digiCOVER premium Olympus E-5	4260041676053	1333815	16,99
N1273	digiCOVER premium Olympus E-510	4260125964434	1169132	16,99
N1834	digiCOVER premium Olympus E-520	4260125966957	1201908	16,99
N2086	digiCOVER premium Olympus E-620	4260125969613	1242106	16,99
N2434	digiCOVER premium Olympus E-PL1	4260220750369	1299764	16,99
N1643	digiCOVER premium Olympus E3	4260125965196	1172438	16,99
N2512	digiCOVER premium Olympus E600	4260220751991	1314522	16,99
N2123	digiCOVER premium Olympus FE-3000	4260041671379	1252183	16,99
N2251	digiCOVER premium Olympus FE-4000	4260041673427	1271100	16,99
N2253	digiCOVER premium Olympus FE-46	4260041673441	1271102	16,99
N2252	digiCOVER premium Olympus FE-5020	4260041673434	1271101	16,99
N2130	digiCOVER premium Olympus mju 5000	4260041671362	1252182	16,99
N2433	digiCOVER premium Olympus mju 5010	4260220750352	1299763	16,99
N2129	digiCOVER premium Olympus mju 6000	4260125969958	1244544	16,99
N2125	digiCOVER premium Olympus mju 7000	4260125969965	1244545	16,99
N2250	digiCOVER premium Olympus mju 7010	4260041673410	1271099	16,99
N2432	digiCOVER premium Olympus mju 7040	4260220750345	1299762	16,99
N2128	digiCOVER premium Olympus mju 8000	4260125969972	1244546	16,99
N2435	digiCOVER premium Olympus mju Tough 3000	4260220750376	1299765	16,99
N2254	digiCOVER premium Olympus mju Tough 6010	4260041673458	1271103	16,99
N2431	digiCOVER premium Olympus mju Tough 6020	4260220750338	1299760	16,99
N2430	digiCOVER premium Olympus mju Tough 8010	4260220750321	1299758	16,99
N3644	digiCOVER premium Olympus OM-D E-M1	4260342398524	1773101	16,99
N3187	digiCOVER premium Olympus OM-D E-M5	4260266954622	1537454	16,99
N2963	digiCOVER premium Olympus Pen E-P3	4260266959498	1478231	16,99
N3599	digiCOVER premium Olympus PEN E-P5	4260342398944	1738939	16,99
N2761	digiCOVER premium Olympus PEN E-PL2	4260041677654	1370231	16,99
N3033	digiCOVER premium Olympus Pen E-PL3	4260266959481	1478232	16,99
N3304	digiCOVER premium Olympus PEN E-PL5	4260266957067	1634416	16,99

N3034	digiCOVER premium Olympus Pen E-PM1	4260266959474	1478233	16,99
N3317	digiCOVER premium Olympus PEN E-PM2	4260266957036	1634414	16,99
N2127	digiCOVER premium Olympus SP-590UZ	4260125969989	1244547	16,99
N2428	digiCOVER premium Olympus SP-600UZ	4260220750307	1299754	16,99
N2756	digiCOVER premium Olympus SP-610UZ	4260041677609	1370220	16,99
N2429	digiCOVER premium Olympus SP-800UZ	4260220750314	1299756	16,99
N3031	digiCOVER premium Olympus SP-810UZ	4260266959511	1478229	16,99
N3308	digiCOVER premium Olympus SP-820UZ	4260266957098	1634420	16,99
N3750	digiCOVER premium Olympus Stylus 1	4260342398104	1826564	16,99
N3571	digiCOVER premium Olympus STYLUS SH-50	4260342398999	1738940	16,99
N3791	digiCOVER premium Olympus Stylus SP-100EE	4260342398012	1836437	16,99
N3482	digiCOVER premium Olympus Stylus SZ-16	4260342399323	1717970	16,99
N3309	digiCOVER premium Olympus Stylus TG-1 / TG-2	4260266958279	1694177	16,99
N3570	digiCOVER premium Olympus STYLUS XZ-10	4260342399033	1738942	16,99
N3305	digiCOVER premium Olympus SZ-14	4260266958972	1634418	16,99
N2845	digiCOVER premium Olympus SZ-20	4260041678477	1395845	16,99
N2896	digiCOVER premium Olympus SZ-30 MR	4260041679337	1417290	16,99
N2757	digiCOVER premium Olympus TG-310	4260041677616	1370221	16,99
N3188	digiCOVER premium Olympus TG-320	4260266954639	1537455	16,99
N2758	digiCOVER premium Olympus TG-610	4260041677623	1370227	16,99
N3189	digiCOVER premium Olympus TG-620 / TG-630	4260266954646	1537456	16,99
N3032	digiCOVER premium Olympus TG-810	4260266959504	1478230	16,99
N3190	digiCOVER premium Olympus TG-820 / TG-860	4260266954653	1537457	16,99
N2759	digiCOVER premium Olympus VG-130	4260041677630	1370229	16,99
N3191	digiCOVER premium Olympus VG-170	4260266954660	1537458	16,99
N2906	digiCOVER premium Olympus VR-320/330	4260266959931	1434545	16,99
N3193	digiCOVER premium Olympus VR-340 / VR-360	4260266954684	1537460	16,99
N2760	digiCOVER premium Olympus XZ-1	4260041677647	1370230	16,99
N3303	digiCOVER premium Olympus XZ-2	4260266957012	1634413	16,99
N555	digiCOVER premium Order nach Wunsch	4260125964601	1169164	16,99
N555T	digiCOVER premium Order nach Wunsch bis 11 Zoll Displaydiagonalgröße	4260266951638	1750527	29,99
N555H	digiCOVER premium Order nach Wunsch Handy	4260266951218	1502412	16,99
N1909	digiCOVER premium Panasonic DMC FX150	4260125967824		16,99
N1908	digiCOVER premium Panasonic DMC FX500	4260125967855		16,99
N1879	digiCOVER premium Panasonic DMC FZ 28	4260125967589		16,99
N1064	digiCOVER premium Panasonic DMC FZ50/ Leica V Lux 1	4260125964373	1169539	16,99
NC1065	digiCOVER premium Panasonic DMC LX2	4260125964694	1169173	16,99
N1878	digiCOVER premium Panasonic DMC LX3	4260125967565		16,99
N2671	digiCOVER premium Panasonic DMC LX5	4260041676404		16,99
N1471	digiCOVER premium Panasonic DMC- FX100	4260125964700	1169174	16,99
N3444	digiCOVER premium Panasonic DMC-FH10	4260342399880	1694251	16,99
N2411	digiCOVER premium Panasonic DMC-FP1	4260220750130	1299733	16,99
N2413	digiCOVER premium Panasonic DMC-FP1	4260220750154	1299735	16,99
N2769	digiCOVER premium Panasonic DMC-FP5	4260041677739	1370240	16,99
N2770	digiCOVER premium Panasonic DMC-FP7	4260041677746	1370242	16,99
N2274	digiCOVER premium Panasonic DMC-FP8	4260041673656	1271135	16,99
N2416	digiCOVER premium Panasonic DMC-FS10	4260220750185	1299738	16,99
N2417	digiCOVER premium Panasonic DMC-FS11	4260220750192	1299740	16,99
N2767	digiCOVER premium Panasonic DMC-FS16 / FH2	4260041677715	1370238	16,99
N2768	digiCOVER premium Panasonic DMC-FS18 / FH5	4260041677722	1370239	16,99
N2412	digiCOVER premium Panasonic DMC-FS30	4260220750147	1299734	16,99
N2414	digiCOVER premium Panasonic DMC-FS33	4260220750161	1299736	16,99
N2763	digiCOVER premium Panasonic DMC-FS35 / FH25	4260041677678	1370234	16,99
N2764	digiCOVER premium Panasonic DMC-FS37 /FH27	4260041677685	1370235	16,99
N3139	digiCOVER premium Panasonic DMC-FS40 / FH6	4260266953243	1518280	16,99
N3140	digiCOVER premium Panasonic DMC-FS45 / FH8	4260266953250	1518281	16,99
N3431	digiCOVER premium Panasonic DMC-FS50	4260342399606	1694231	16,99
N2148	digiCOVER premium Panasonic DMC-FS6	4260041671317	1252174	16,99
N2415	digiCOVER premium Panasonic DMC-FS62	4260220750178	1299737	16,99
N2854	digiCOVER premium Panasonic DMC-FT10	4260041678521	1395851	16,99
N3194	digiCOVER premium Panasonic DMC-FT20	4260266954691	1537461	16,99
N2849	digiCOVER premium Panasonic DMC-FT3	4260041678514	1395850	16,99
N3195	digiCOVER premium Panasonic DMC-FT4	4260266954707	1537462	16,99
N1820	digiCOVER premium Panasonic DMC-FX 500	4260125966599	1196727	16,99
N1550	digiCOVER premium Panasonic DMC-FX33	4260125964816	1169200	16,99
N1551	digiCOVER premium Panasonic DMC-FX55	4260125964823	1169201	16,99
N2273	digiCOVER premium Panasonic DMC-FX60	4260041673649	1271134	16,99
N2410	digiCOVER premium Panasonic DMC-FX66	4260220750123	1299732	16,99
N2848	digiCOVER premium Panasonic DMC-FX77	4260041678507	1395848	16,99
N2989	digiCOVER premium Panasonic DMC-FX90	4260266951287	1467513	16,99
N2990	digiCOVER premium Panasonic DMC-FZ150	4260266951294	1467514	16,99
N1552	digiCOVER premium Panasonic DMC-FZ18	4260125964380	1169124	16,99
N3293	digiCOVER premium Panasonic DMC-FZ200	4260266956756	1634202	16,99
N2276	digiCOVER premium Panasonic DMC-FZ38	4260041673670	1271137	16,99
N2988	digiCOVER premium Panasonic DMC-FZ48	4260266951270	1467512	16,99
N3294	digiCOVER premium Panasonic DMC-FZ62	4260266956916	1634203	16,99
N3643	digiCOVER premium Panasonic DMC-FZ72	4260342398746	1773100	16,99
N1946	digiCOVER premium Panasonic DMC-G1K	4260125967985	1220706	16,99
N2918	digiCOVER premium Panasonic DMC-G3	4260266959979	1434535	16,99
N3291	digiCOVER premium Panasonic DMC-G5	4260266956930	1634200	16,99
N3525	digiCOVER premium Panasonic DMC-G6	4260342399132	1724322	16,99
N2272	digiCOVER premium Panasonic DMC-GF1	4260041673632	1271133	16,99
N2762	digiCOVER premium Panasonic DMC-GF2	4260041677661	1370232	16,99
N2953	digiCOVER premium Panasonic DMC-GF3 / GF3X	4260266959870	1466981	16,99

N3319	digiCOVER premium Panasonic DMC-GF5	4260266956718	1634212	16,99
N3569	digiCOVER premium Panasonic DMC-GF6	4260342399019	1738931	16,99
N3638	digiCOVER premium Panasonic DMC-GX 7	4260342398722	1773095	16,99
N3142	digiCOVER premium Panasonic DMC-GX1	4260266953281	1518284	16,99
N1069	digiCOVER premium Panasonic DMC-L1 / Leica DigiLux 3	4260125964687	1169172	16,99
N1553	digiCOVER premium Panasonic DMC-L10	4260125964366	1169123	16,99
N3546	digiCOVER premium Panasonic DMC-LF1	4260342399057	1727804	16,99
N3292	digiCOVER premium Panasonic DMC-LX7	4260266956763	1634201	16,99
N2765	digiCOVER premium Panasonic DMC-S1	4260041677692	1370236	16,99
N3138	digiCOVER premium Panasonic DMC-S2	4260266953236		16,99
N2766	digiCOVER premium Panasonic DMC-S3	4260041677708	1370237	16,99
N3141	digiCOVER premium Panasonic DMC-SZ1	4260266953267	1518282	16,99
N2707	digiCOVER premium Panasonic DMC-SZ7	4260266953274	1518283	16,99
N2418	digiCOVER premium Panasonic DMC-TZ10	4260220750208	1299741	16,99
N2846	digiCOVER premium Panasonic DMC-TZ18	4260041678484	1395846	16,99
N2847	digiCOVER premium Panasonic DMC-TZ22	4260041678491	1395847	16,99
N3196	digiCOVER premium Panasonic DMC-TZ25 / TZ31	4260266954714	1537463	16,99
N1230	digiCOVER premium Panasonic DMC-TZ3	4260125964830	1169202	16,99
N1719	digiCOVER premium Panasonic DMC-TZ4	4260125966926	1201332	16,99
N3419	digiCOVER premium Panasonic DMC-TZ41	4260266958231	1694185	16,99
N1718	digiCOVER premium Panasonic DMC-TZ5	4260125966919	1201331	16,99
N2419	digiCOVER premium Panasonic DMC-TZ8	4260220750215	1299743	16,99
N2275	digiCOVER premium Panasonic DMC-ZX1 / ZX3	4260041673663	1271136	16,99
N2076	digiCOVER premium Panasonic FS 15	4260125969514	1242096	16,99
N2074	digiCOVER premium Panasonic FS 25	4260125969491	1242094	16,99
N2077	digiCOVER premium Panasonic FS 7	4260125969521	1242097	16,99
N2079	digiCOVER premium Panasonic FX 40	4260125969545	1242099	16,99
N2073	digiCOVER premium Panasonic FX 550	4260125969484	1242093	16,99
N2510	digiCOVER premium Panasonic G2 / GH2	4260220751984	1314521	16,99
N3372	digiCOVER premium Panasonic GH3	4260266958477	1665182	16,99
N3683	digiCOVER premium Panasonic GM1	4260342398326	1783073	16,99
N2591	digiCOVER premium Panasonic Lumix DMC-FX 700	4260047004256	1331502	16,99
N2579	digiCOVER premium Panasonic Lumix DMC-FZ 100	4260047004232	1331500	16,99
N2584	digiCOVER premium Panasonic Lumix DMC-FZ 45	4260047004249	1331501	16,99
N3426	digiCOVER premium Panasonic SZ3	4260342399941	1694203	16,99
N3425	digiCOVER premium Panasonic SZ9	4260342399927	1694199	16,99
N3777	digiCOVER premium Panasonic TZ 56	4260342398050	1836433	16,99
N2075	digiCOVER premium Panasonic TZ 6	4260125969507	1242095	16,99
N3776	digiCOVER premium Panasonic TZ 61	4260342398036	1836430	16,99
N2078	digiCOVER premium Panasonic TZ 7	4260125969538	1242098	16,99
N3424	digiCOVER premium Panasonic TZ36	4260342399965	1694198	16,99
N3730	digiCOVER premium Panasonic XS-3	4260342398173	1797862	16,99
N3427	digiCOVER premium Panasonic XS1	4260342399903	1694204	16,99
N3233	digiCOVER premium Pentax K-01	4260266959306		16,99
N3285	digiCOVER premium Pentax K-30 / K-50	4260266959191	1593300	16,99
N3681	digiCOVER premium Pentax K-500	4260342391112	1783069	16,99
N3302	digiCOVER premium Pentax K-5II / K-5IIs	4260266956992	1634393	16,99
N1971	digiCOVER premium Pentax K-m / K-x	4260125968173	1220710	16,99
N2625	digiCOVER premium Pentax K-r	4260041675988	1333800	16,99
N1038	digiCOVER premium Pentax K100D, K110D	4260125964403	1169127	16,99
N1099	digiCOVER premium Pentax K10D	4260125964397	1169125	16,99
N1721	digiCOVER premium Pentax K200D	4260125965837	1181147	16,99
N1722	digiCOVER premium Pentax K20D	4260125965844	1181148	16,99
N3667	digiCOVER premium Pentax K3	4260342398364	1783055	16,99
N2622	digiCOVER premium Pentax K5	4260041675957	1333794	16,99
N2196	digiCOVER premium Pentax K7	4260041672284	1267310	16,99
N3437	digiCOVER premium Pentax MX-1	4260342399729	1694240	16,99
N2463	digiCOVER premium Pentax Optio E90	4260220750659	1299797	16,99
N2459	digiCOVER premium Pentax Optio H90	4260220750611	1299793	16,99
N2458	digiCOVER premium Pentax Optio I-10	4260220750604	1299792	16,99
N2462	digiCOVER premium Pentax Optio P80	4260220750642	1299796	16,99
N2623	digiCOVER premium Pentax Optio RS1000	4260041675964	1333796	16,99
N2624	digiCOVER premium Pentax Optio RZ10	4260041675971	1333799	16,99
N2857	digiCOVER premium Pentax Optio S1	4260041678552	1395855	16,99
N2460	digiCOVER premium Pentax Optio W80	4260220750628	1299794	16,99
N2461	digiCOVER premium Pentax Optio W90	4260220750635	1299795	16,99
N2464	digiCOVER premium Pentax Optio WS80	4260220750666	1299799	16,99
N3005	digiCOVER premium Pentax Q	4260266951447	1467558	16,99
N3301	digiCOVER premium Pentax Q10	4260266956961	1634390	16,99
N3682	digiCOVER premium Pentax Q7 / Q10	4260342391143	1783071	16,99
N3007	digiCOVER premium Pentax RZ18	4260266951690	1478241	16,99
N3299	digiCOVER premium Pentax WG2	4260266958989	1634383	16,99
N3300	digiCOVER premium Pentax X5	4260266956954	1634386	16,99
N2082	digiCOVER premium Pentax X70	4260125969576	1242102	16,99
N3290H	digiCOVER premium Premium Apple iPhone 5	4260266956909		12,99
N3615H	digiCOVER premium Premium Apple iPhone 5c	4260342398302		12,99
N1296	digiCOVER premium Ricoh Caplio R6 / R7 / GR11	4260125964670	1169171	16,99
N1791	digiCOVER premium Ricoh Caplio R8	4260125966445	1188939	16,99
N2139	digiCOVER premium Ricoh CX1-5	4260125969996	1244548	16,99
N804	digiCOVER premium Ricoh GR	4260125964663	1169170	16,99
N3035	digiCOVER premium Ricoh GR Digital IV	4260266959467	1478234	16,99
N1959	digiCOVER premium Ricoh GX 200			16,99
N1469	digiCOVER premium Ricoh GX100	4260125964694	1169169	16,99
N2859	digiCOVER premium Ricoh GXR	4260266959405		16,99

N3036	digiCOVER premium Ricoh PX	4260266959450	1478235	16,99
N1957	digiCOVER premium Ricoh R10	4260125968005	1220708	16,99
N2739	digiCOVER premium Rollei Flexline 250	4260041677432	1370171	16,99
N3197	digiCOVER premium Samsung DV300F	4260266954721	1537464	16,99
N2455	digiCOVER premium Samsung ES70	4260220750574	1299789	16,99
N2597	digiCOVER premium Samsung ES75	4260041676183	1333835	16,99
N2449	digiCOVER premium Samsung EX1	4260220750512	1299783	16,99
N3338	digiCOVER premium Samsung EX2F	4260266956602	1675306	16,99
N2815H	digiCOVER premium Samsung Galaxy ACE	4260266951157		12,99
N3814	digiCOVER premium Samsung Galaxy Camera 2	4260342397558	1838011	16,99
N3318	digiCOVER premium Samsung Galaxy Kamera	4260266956794	1634207	16,99
N3637	digiCOVER premium Samsung Galaxy NX	4260342398760	1773094	16,99
N3412H	digiCOVER premium Samsung Galaxy S4 - i9500	4260342399422		12,99
N3516H	digiCOVER premium Samsung Galaxy S4 - MINI	4260342390757		12,99
N3641H	digiCOVER premium Samsung Galaxy S4 Zoom	4260342398548		12,99
N1682	digiCOVER premium Samsung GX20	4260125965882	1181153	16,99
N2072	digiCOVER premium Samsung HZ10W	4260125969477	1242092	16,99
N2069	digiCOVER premium Samsung HZ15W	4260125969446	1242089	16,99
N3353H	digiCOVER premium Samsung i8190 Galaxy S3 mini	4260266958316		12,99
N2890H	digiCOVER premium Samsung i9100 Galaxy S2	4260266951034		12,99
N3242H	digiCOVER premium Samsung i9300 Galaxy S3	4260266955360		12,99
N2996	digiCOVER premium Samsung MV800	4260266951355	1467531	16,99
N3321	digiCOVER premium Samsung MV900F	4260266956633	1634412	16,99
N3324	digiCOVER premium Samsung N8000 Galaxy Note 10.1	4260266958606		24,99
N3072H	digiCOVER premium Samsung Nexus - i9250	4260266956831		12,99
N3815	digiCOVER premium Samsung NX 30	4260342397534	1838013	16,99
N2450	digiCOVER premium Samsung NX10 / NX5	4260220750529	1299784	16,99
N2640	digiCOVER premium Samsung NX100	4260041676077	1333818	16,99
N2778	digiCOVER premium Samsung NX11	4260041677821	1370255	16,99
N3284	digiCOVER premium Samsung NX20	4260266956596	1634379	16,99
N2995	digiCOVER premium Samsung NX200	4260266951348	1467530	16,99
N3618	digiCOVER premium Samsung NX2000	4260342398845	1773079	16,99
N3322	digiCOVER premium Samsung NX210	4260266956572	1638445	16,99
N3439	digiCOVER premium Samsung NX300	4260342399804	1694256	16,99
N3271	digiCOVER premium Samsung P3100 Galaxy TAB 2 7.0	4260266958590		22,99
N3250	digiCOVER premium Samsung P5110 Galaxy TAB 2 10.1	4260266958583		24,99
N2456	digiCOVER premium Samsung PL100	4260220750581	1299790	16,99
N2771	digiCOVER premium Samsung PL120	4260041677753	1370243	16,99
N2454	digiCOVER premium Samsung PL150	4260220750567	1299788	16,99
N2772	digiCOVER premium Samsung PL170	4260041677760	1370245	16,99
N2596	digiCOVER premium Samsung PL200	4260047004300	1331504	16,99
N2647	digiCOVER premium Samsung PL200	4260041676091	1333821	16,99
N2775	digiCOVER premium Samsung PL210	4260041677791	1370249	16,99
N2457	digiCOVER premium Samsung PL80	4260220750598	1299791	16,99
N2595	digiCOVER premium Samsung PL90	4260041676176	1333833	16,99
N2173H	digiCOVER premium Samsung S 5230	4260266956848		12,99
N2828H	digiCOVER premium Samsung S 5260	4260266956855		12,99
N3164H	digiCOVER premium Samsung S 7500	4260266956862		12,99
N3081H	digiCOVER premium Samsung S2	4260266956824		12,99
N2774	digiCOVER premium Samsung SH100	4260041677784	1370248	16,99
N2593	digiCOVER premium Samsung ST 100	4260041676169	1333830	16,99
N2594	digiCOVER premium Samsung ST 600	4260047004287	1331503	16,99
N2592	digiCOVER premium Samsung ST 80	4260041676152	1333827	16,99
N3198	digiCOVER premium Samsung ST200	4260266954745	1537465	16,99
N2135	digiCOVER premium Samsung ST50	4260041671324	1252175	16,99
N2452	digiCOVER premium Samsung ST5000	4260220750543	1299786	16,99
N2453	digiCOVER premium Samsung ST60	4260220750550	1299787	16,99
N3199	digiCOVER premium Samsung ST66 / ST77	4260266954752	1537466	16,99
N2773	digiCOVER premium Samsung ST700	4260041677777	1370247	16,99
N3200	digiCOVER premium Samsung ST88	4260266954769	1537467	16,99
N2997	digiCOVER premium Samsung ST93	4260266951362	1467533	16,99
N2087	digiCOVER premium Samsung TL320	4260125969620	1242107	16,99
N2729H	digiCOVER premium Samsung Wave II GT S 8530	4260041678293		12,99
N3812	digiCOVER premium Samsung WB 1100F	4260342397596	1838009	16,99
N3813	digiCOVER premium Samsung WB 2200F	4260342397572		16,99
N3811	digiCOVER premium Samsung WB 35F	4260342397619	1838007	16,99
N3810	digiCOVER premium Samsung WB 50F	4260342397633	1838005	16,99
N2136	digiCOVER premium Samsung WB100	4260041671331	1252176	16,99
N3398	digiCOVER premium Samsung WB100	4260342399620	1694206	16,99
N3201	digiCOVER premium Samsung WB150F	4260266954776	1537468	16,99
N2639	digiCOVER premium Samsung WB2000	4260041676060	1333817	16,99
N2776	digiCOVER premium Samsung WB210	4260041677807	1370252	16,99
N3441	digiCOVER premium Samsung WB250F	4260342399767	1694244	16,99
N2137	digiCOVER premium Samsung WB500 / 510	4260041671348	1252180	16,99
N2138	digiCOVER premium Samsung WB550 / 560	4260041671355	1252181	16,99
N2451	digiCOVER premium Samsung WB600 /WB650	4260220750536	1299785	16,99
N2777	digiCOVER premium Samsung WB700	4260041677814	1370254	16,99
N2998	digiCOVER premium Samsung WB750	4260266951379	1467535	16,99
N3202	digiCOVER premium Samsung WB850	4260266954783	1537469	16,99
N3440	digiCOVER premium Samsung WB850F	4260342399743	1694242	16,99
N2576	digiCOVER premium Sigma SD15	4260266952963		16,99
N3604	digiCOVER premium Sony - Xperia M	4260342398135	1797867	12,99
N3397H	digiCOVER premium Sony - Xperia Z	4260342399385	1705588	12,99
N2599	digiCOVER premium Sony Alpha 290	4260041676114	1333823	16,99

N3666	digiCOVER premium Sony Alpha 3000	4260342398340	1783056	16,99
N2598	digiCOVER premium Sony Alpha 33/55	4260047004164	1331493	16,99
N2378	digiCOVER premium Sony Alpha 330	4260041674776	1291697	16,99
N2875	digiCOVER premium Sony Alpha 390	4260041678910	1404171	16,99
N3789	digiCOVER premium Sony Alpha 5000	4260342397978	1836467	16,99
N2600	digiCOVER premium Sony Alpha 560/580	4260041676121	1333824	16,99
N3790	digiCOVER premium Sony Alpha 6000	4260342397992	1836451	16,99
N3724	digiCOVER premium Sony Alpha 7 / 7R	4260342398210	1797865	16,99
N3331	digiCOVER premium Sony Alpha 99	4260266958941	1638459	16,99
N1659	digiCOVER premium Sony DSC T2	4260125965967	1181162	16,99
N1796	digiCOVER premium Sony DSC-H 50	4260125966469	1188940	16,99
N3443	digiCOVER premium Sony DSC-H200	4260342399866	1694248	16,99
N1563	digiCOVER premium Sony DSC-H3	4260125964427	1169131	16,99
N3787	digiCOVER premium Sony DSC-H400	4260342397930	1836476	16,99
N3786	digiCOVER premium Sony DSC-H400V	4260342397916	1836477	16,99
N2442	digiCOVER premium Sony DSC-H55	4260220750444	1299776	16,99
N2782	digiCOVER premium Sony DSC-H70	4260041677869	1370264	16,99
N1242	digiCOVER premium Sony DSC-H9	4260125964359	1169129	16,99
N3203	digiCOVER premium Sony DSC-H90	4260266954790	1537470	16,99
N2116	digiCOVER premium Sony DSC-HX1	4260041671416	1252187	16,99
N2901	digiCOVER premium Sony DSC-HX100V	4260266959894	1478245	16,99
N3238	digiCOVER premium Sony DSC-HX10V	4260266959214	1593298	16,99
N3204	digiCOVER premium Sony DSC-HX200	4260266954806	1537471	16,99
N3205	digiCOVER premium Sony DSC-HX20V	4260266954813	1537472	16,99
N3483	digiCOVER premium Sony DSC-HX300	4260342399309	1717968	16,99
N3524	digiCOVER premium Sony DSC-HX50	4260342399118	1724342	16,99
N2437	digiCOVER premium Sony DSC-HX5VN	4260220750390	1299767	16,99
N3788	digiCOVER premium Sony DSC-HX60	4260342397954	1836471	16,99
N2779	digiCOVER premium Sony DSC-HX7V	4260041677838	1370258	16,99
N2898	digiCOVER premium Sony DSC-HX9V	4260266959924	1434547	16,99
N3390	digiCOVER premium Sony DSC-RX1	4260266958361	1665189	16,99
N3723	digiCOVER premium Sony DSC-RX10	4260342398296	1797876	16,99
N3276	digiCOVER premium Sony DSC-RX100	4260266959221	1593297	16,99
N3619	digiCOVER premium Sony DSC-RX100 M2	4260342398821	1773081	16,99
N2603	digiCOVER premium Sony DSC-S 2100	4260041676145	1333826	16,99
N2439	digiCOVER premium Sony DSC-S2100	4260220750413	1299773	16,99
N2784	digiCOVER premium Sony DSC-T110	4260041677883	1370267	16,99
N1564	digiCOVER premium Sony DSC-T200	4260125964908	1169210	16,99
N1703	digiCOVER premium Sony DSC-T300	4260125965912	1181157	16,99
N1565	digiCOVER premium Sony DSC-T70	4260125964892	1169209	16,99
N1702	digiCOVER premium Sony DSC-T70	4260125965905	1181155	16,99
N3429	digiCOVER premium Sony DSC-TF1	4260342399781	1694246	16,99
N3121	digiCOVER premium Sony DSC-TX 55	4260266953038	1518266	16,99
N2266	digiCOVER premium Sony DSC-TX1	4260041673571	1271119	16,99
N2783	digiCOVER premium Sony DSC-TX10	4260041677876	1370266	16,99
N2781	digiCOVER premium Sony DSC-TX100V	4260041677852	1370262	16,99
N3206	digiCOVER premium Sony DSC-TX20	4260266954820	1537473	16,99
N3620	digiCOVER premium Sony DSC-TX30	4260342398807	1773084	16,99
N2443	digiCOVER premium Sony DSC-TX5	4260220750451	1299777	16,99
N2601	digiCOVER premium Sony DSC-TX9	4260047004201	1331499	16,99
N3118	digiCOVER premium Sony DSC-W 610	4260266952994		16,99
N2268	digiCOVER premium Sony DSC-W180	4260041673596	1271127	16,99
N2115	digiCOVER premium Sony DSC-W220	4260125963024	1244549	16,99
N2114	digiCOVER premium Sony DSC-W290	4260125963031	1244551	16,99
N2441	digiCOVER premium Sony DSC-W320 / W350	4260220750437	1299775	16,99
N2440	digiCOVER premium Sony DSC-W360	4260220750420	1299774	16,99
N2438	digiCOVER premium Sony DSC-W380	4260220750406	1299768	16,99
N2789	digiCOVER premium Sony DSC-W510	4260041677937	1370385	16,99
N2788	digiCOVER premium Sony DSC-W530	4260041677920	1370283	16,99
N2787	digiCOVER premium Sony DSC-W560	4260041677913	1370282	16,99
N2786	digiCOVER premium Sony DSC-W570	4260041677906	1370280	16,99
N3119	digiCOVER premium Sony DSC-W620	4260266953007		16,99
N3120	digiCOVER premium Sony DSC-W650	4260266953014		16,99
N3207	digiCOVER premium Sony DSC-W690	4260266954837	1537474	16,99
N2267	digiCOVER premium Sony DSC-WX1	4260041673588	1271126	16,99
N2785	digiCOVER premium Sony DSC-WX10	4260041677890	1370277	16,99
N3544	digiCOVER premium Sony DSC-WX200	4260342399071	1727802	16,99
N3507	digiCOVER premium Sony DSC-WX300	4260342399224	1717978	16,99
N3785	digiCOVER premium Sony DSC-WX350	4260342397879	1836480	16,99
N2602	digiCOVER premium Sony DSC-WX5	4260041676138	1333825	16,99
N3208	digiCOVER premium Sony DSC-WX50 / WX100	4260266954844	1537475	16,99
N2856	digiCOVER premium Sony DSC-WX7	4260041678545	1395853	16,99
N3515	digiCOVER premium Sony DSC-WX80	4260342399187	1717985	16,99
N2780	digiCOVER premium Sony DSC-WX9	4260041677845	1370259	16,99
N1459	digiCOVER premium Sony DSLR-Alpha 100	4260125964410	1169128	16,99
N1711	digiCOVER premium Sony DSLR-Alpha 200	4260125965868	1181150	16,99
N2202	digiCOVER premium Sony DSLR-Alpha 230	4260041762084	1267313	16,99
N1712	digiCOVER premium Sony DSLR-Alpha 300	4260125965875	1181151	16,99
N2999	digiCOVER premium Sony DSLR-Alpha 35	4260266951386	1467540	16,99
N1710	digiCOVER premium Sony DSLR-Alpha 350	4260125965851	1181149	16,99
N3274	digiCOVER premium Sony DSLR-Alpha 37 / 58	4260266959252	1593294	16,99
N2203	digiCOVER premium Sony DSLR-Alpha 380	4260041762091	1267312	16,99
N2270	digiCOVER premium Sony DSLR-Alpha 500	4260041673618	1271129	16,99
N2271	digiCOVER premium Sony DSLR-Alpha 550	4260041673625	1271131	16,99

N3001	digiCOVER premium Sony DSLR-Alpha 65V / 57	4260266951409	1467551	16,99
N1610	digiCOVER premium Sony DSLR-Alpha 700	4260125965189	1172437	16,99
N3002	digiCOVER premium Sony DSLR-Alpha 77V	4260266951416	1467552	16,99
N2269	digiCOVER premium Sony DSLR-Alpha 850	4260041673601	1271128	16,99
N1947	digiCOVER premium Sony DSLR-Alpha 900	4260125967992	1220707	16,99
N2862H	digiCOVER premium Sony Ericsson Xperia ARC	4260266951072		12,99
N2874H	digiCOVER premium Sony Ericsson Xperia PLAY	4260266951065		12,99
N2607H	digiCOVER premium Sony Ericsson Xperia X8	4260266951058		12,99
N2790	digiCOVER premium Sony MHS-FS3	4260041677944	1370389	16,99
N3680	digiCOVER premium Sony NEX 5T	4260342391105	1783068	16,99
N3143	digiCOVER premium Sony Nex 7	4260266953021	1518305	16,99
N2522	digiCOVER premium Sony NEX-3/NEX-5	4260220752004	1314524	16,99
N3477	digiCOVER premium Sony NEX-3N	4260342399361	1717966	16,99
N3371	digiCOVER premium Sony NEX-5R	4260266956640	1667876	16,99
N3332	digiCOVER premium Sony NEX-6	4260266958927	1638457	16,99
N3000	digiCOVER premium Sony NEX-C3 / NEX-5N	4260266951393	1467544	16,99
N3320	digiCOVER premium Sony NEX-F3	4260266956671	1634422	16,99
N2085	digiCOVER premium Sony T90	4260125969606	1242105	16,99
N2084	digiCOVER premium Sony T900	4260125969590	1242104	16,99
N3270H	digiCOVER premium Sony Xperia Go	4260266956879		12,99
N2970H	digiCOVER premium Sony Xperia Ray	4260266956893		12,99
N3161H	digiCOVER premium Sony Xperia S	4260266956886		12,99
N1746	digiCOVER premium Sony-PSP Slim & Lite	4260125966803		16,99
N271	digiCOVER premium Sony-PSP vereinfacht	4260125966810		16,99
N2389	digiCOVER premium SonyDSC-TX7	4260220750000	1299711	16,99
N3496	S+M digiCOVER Premium GoPro HERO 3 Monitor	4260342390696	1717787	16,99